



20450 Century Boulevard  
Germantown, MD 20874

# **EMAC Low Level Driver Software Design Document**

Revision 1.4

September 24, 2019

## **Document License**

This work is licensed under the Creative Commons Attribution-Share Alike 3.0 United States License. To view a copy of this license, visit <http://creativecommons.org/licenses/by-sa/3.0/us/> or send a letter to Creative Commons, 171 Second Street, Suite 300, San Francisco, California, 94105, USA.

## **Contributors to this document**

Copyright (C) 2010-2019 Texas Instruments Incorporated - <http://www.ti.com/>

Revision Record		
Document Title: <b>Software Design Specification</b>		
Date	Revision	Description of Change
04-04-2017	0.1	Initial Release
04-10-2017	0.2	Added feature list
07-07-2017	0.3	Addressed all the peer review comments
06-13-2018	0.3	Added feature list for AM65XX
07-13-2018	0.4	Added driver details for AM65xx
10-04-2018	0.5	Added document license for Creative Commons
10-05-2018	0.6	WIP draft Incorporated subset of review comments
11-27-2018	0.7	Added sections for IOCTL commands, driver initialization , TX Time Stamp, TX Software Descriptor Return Queue Processing, RX Time Stamp
02-21-2019	0.8	Incorporate follow up comments from customer
3-28-2019	0.9	Incorporate additional follow up comments from customer
4-2-2019	.95	Additional IOCTL updates
5-08-2019	1.0	Updates to error types, Clarification of each IOCTL type to be either synchronous versus asynchronous, adding details for EMAC_IOCTL_INTERFACE_MAC_CONFIG
5-15-2019	1.1	IOCTL table updates. Enhanced emac poll link status section. Enhanced Packet RX section. Miscellaneous updates.
5-31-2019	1.2	Added sections 7.4.2.1, 7.4.2.1.1 and 7.4.2.2 Added clarification to emac_poll_ctrl API and ring bitmap. Updated FDB ADD IOCTL details
9-6-2019	1.3	Section 7.4.3: Updated clarification of return codes to application during emac_send Section 7.4.5: Further clarification to TX timestamp implementation Section 7.4.6: Added details of how ring number is returned in rx callback

---

---

9-24-19	1.4	Section 14.4.9.1: Added details about touch and valid bits of FID_C2 bitfield for FDB ADD IOCTL Section 7.4: Clarified max number of RX subchannels to be 16. Section 7.4.8 Clarification of TX channel priority for dual mac and switch use cases.
---------	-----	---

# TABLE OF CONTENTS

<b>1</b>	<b>PURPOSE</b> .....	<b>1</b>
<b>2</b>	<b>FUNCTIONAL OVERVIEW</b> .....	<b>1</b>
<b>3</b>	<b>ASSUMPTIONS</b> .....	<b>1</b>
<b>4</b>	<b>DEFINITIONS, ABBREVIATIONS, ACRONYMS</b> .....	<b>1</b>
<b>5</b>	<b>REFERENCES</b> .....	<b>1</b>
<b>6</b>	<b>DESIGN CONSTRAINTS</b> .....	<b>2</b>
6.1	EXTERNAL CONSTRAINTS / FEATURES .....	2
6.2	EXTERNAL CONSTRAINTS / SYSTEM PERFORMANCE.....	2
6.3	INTERNAL CONSTRAINTS / REQUIREMENTS.....	2
<b>7</b>	<b>SYSTEM OVERVIEW</b> .....	<b>2</b>
7.1	SYSTEM CONTEXT.....	2
7.2	FUNCTIONAL DESCRIPTION.....	3
7.3	CPPI BASED IP DRIVER: IP VERSION 0/1/4.....	4
7.3.1	<i>EMAC Peripheral configuration</i> .....	4
7.3.2	<i>Queue Management</i> .....	5
7.3.3	<i>Packet Descriptor</i> .....	5
7.3.4	<i>Packet TX</i> .....	5
7.3.5	<i>Packet RX</i> .....	6
7.3.6	<i>Single Critical Section</i> .....	6
7.3.7	<i>Multi-core Critical section</i> .....	6
7.3.8	<i>Interrupts</i> .....	7
7.4	UDMA/NAVSS BASED IP DRIVER: IP VERSION 5.....	7
7.4.1	<i>Memory</i> .....	8
7.4.2	<i>EMAC Driver Initialization configuration</i> .....	9
7.4.2.1	EMAC Open Configuration Details .....	10
7.4.2.2	ICSSG Port Queue Configuration .....	15
7.4.3	<i>Packet TX</i> .....	15
7.4.4	<i>TX Software Descriptor Return Queue Processing</i> .....	16
7.4.5	<i>TX Time Stamp</i> .....	17
7.4.6	<i>Packet RX</i> .....	18
7.4.7	<i>RX Time Stamp</i> .....	18
7.4.8	<i>New APIs</i> .....	19
7.4.9	<i>IOCTL API Details</i> .....	21
7.4.9.1	Switch Use Case.....	23
7.4.9.2	DUAL MAC Use Case (Single Instance ICSS FW).....	30
7.4.9.3	DUAL MAC Use Case (Interposer Instance ICSS FW).....	32
7.4.10	<i>Platform Specific functions/configuration</i> .....	32
7.4.11	<i>Interrupts</i> .....	32
7.4.12	<i>Multi- Core Support</i> .....	32
7.4.13	<i>Interposer Card Support</i> .....	32
7.4.13.1	Switch Use Case (Switch F/W for Interposer Card).....	33
7.4.13.2	Dual MAC Use Case (Interposer Card with Standalone Dual Mac F/W) .....	33
7.5	EMAC POLLING LINK STATUS .....	34
7.6	ERROR HANDLING .....	35
<b>8</b>	<b>STANDARDS, CONVENTIONS AND PROCEDURES</b> .....	<b>36</b>
8.1	DOCUMENTATION STANDARDS .....	36
8.2	NAMING CONVENTIONS.....	36

8.3	PROGRAMMING STANDARDS .....	36
8.4	SOFTWARE DEVELOPMENT TOOLS .....	36
<b>9</b>	<b>IP FEATURE LIST COMPARISON .....</b>	<b>37</b>
<b>10</b>	<b>SYSTEM DESIGN .....</b>	<b>42</b>
10.1	DESIGN APPROACH .....	42
10.2	DEPENDENCIES.....	42
10.3	DECOMPOSITION OF SYSTEM.....	43
<b>10.3.1</b>	<i>Platform Independent APIs .....</i>	43
<b>10.3.2</b>	<i>Platform specific functions/configurations .....</i>	43
<b>10.3.3</b>	<i>Operating System Abstraction Layer (OSAL) .....</i>	43
<b>10.3.4</b>	<i>CSL Functional Layer.....</i>	44
<b>10.3.5</b>	<i>CSL Register Layer .....</i>	44
<b>11</b>	<b>OMAPL13X INTEGRATION .....</b>	<b>44</b>
11.1	PLATFORM INDEPENDENT API .....	44
11.2	PLATFORM SPECIFIC FUNCTIONS/CONFIGURATION.....	44
11.3	OSAL.....	44
11.4	CSL.....	44
11.5	BUILD SETUP.....	44

## 1 Purpose

This document describes the functionality, architecture, and operation of the Ethernet Media Access Controller (EMAC) Low Level Driver. Also the data types, data structures and application programming interfaces (API) provided by the EMAC driver are explained in this document.

## 2 Functional Overview

EMAC driver provides a well-defined API layer which allows applications to use the EMAC peripheral to control the flow of packet data from the processor to the PHY and the MDIO module to control PHY configuration and status monitoring.

## 3 Assumptions

NA

## 4 Definitions, Abbreviations, Acronyms

Term	Description
API	Application Programming Interface
CSL	Chip Support Library
EMAC	Ethernet Media Access Controller
LLD	Low Level Driver Design
ISR	Interrupt Service Routine
MDIO	Managed Data Input Output
MMR	Memory Mapped Registers
NDK	Network Development Kit
NIMU	Network Interface Management Unit
OSAL	Operating System Adaptation Layer
PHY	Physical layer
MGMT	Management
FW	Firmware

**Table 1 : Abbreviations and acronyms**

## 5 References

Following references are related to the features described in this document and shall be consulted as necessary.

- TRM for SoCs being supported by EMAC LLD

- [Migrating\\_Applications\\_from\\_EDMA\\_to\\_UDMA\\_using\\_TI-RTOS.pdf](#)  
(ti/drv/udma/docs)

## **6 Design Constraints**

### **6.1 External Constraints / Features**

- EMAC LLD should access OS components only through OSAL.

### **6.2 External Constraints / System Performance**

EMAC LLD should allow applications to transfer and receive through Ethernet port and communicate with the network devices at maximum possible speed as supported by HW.

### **6.3 Internal Constraints / Requirements**

EMAC LLD should use CSL layer for register access to abstract the HW dependencies and maintain portability across the platforms.

## **7 System Overview**

### **7.1 System Context**

EMAC LLD is designed to be functional as part of TI processor SDK driver package. There will be several components in the processor SDK, apart from applications, which uses EMAC LLD. Driver design ensures that it fits into system properly and provides suitable APIs for utilizing EMAC HW functionality.

The following figure shows the architecture of processor SDK sub-system around the LLD modules.

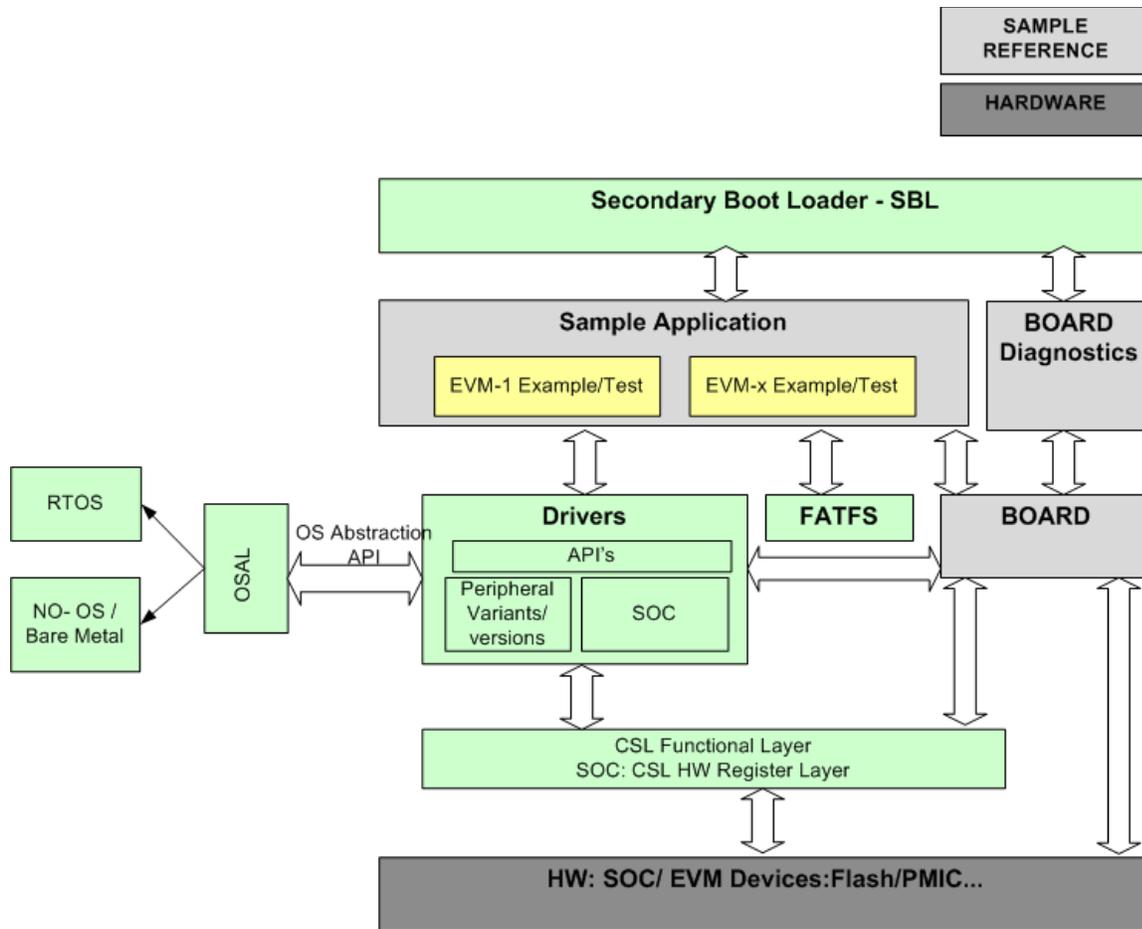


Figure 1 : Process SDK driver subsystem architecture

## 7.2 Functional Description

The EMAC driver is responsible for the following:-

- EMAC/MDIO configuration & Queue Management
- Providing a well-defined API to interface with the applications
- Well defined operating system adaptation layer API which supports single core and multiple core critical section protection


The next couple of sections document each of the above mentioned responsibilities in greater detail:

### 7.3 CPPI Based IP Driver: IP Version 0/1/4

#### 7.3.1 EMAC Peripheral configuration

The EMAC driver test application provides a sample implementation sequence which initializes and configures the EMAC IP block. This implementation is sample only and application developers are recommended to modify it as deemed fit.

The initialization sequence is not a part of the EMAC driver library. This was done because the EMAC initialization sequence has to be modified and customized by application developers. The following figure shows the EMAC API the application can call to initialize the EMAC peripheral:-

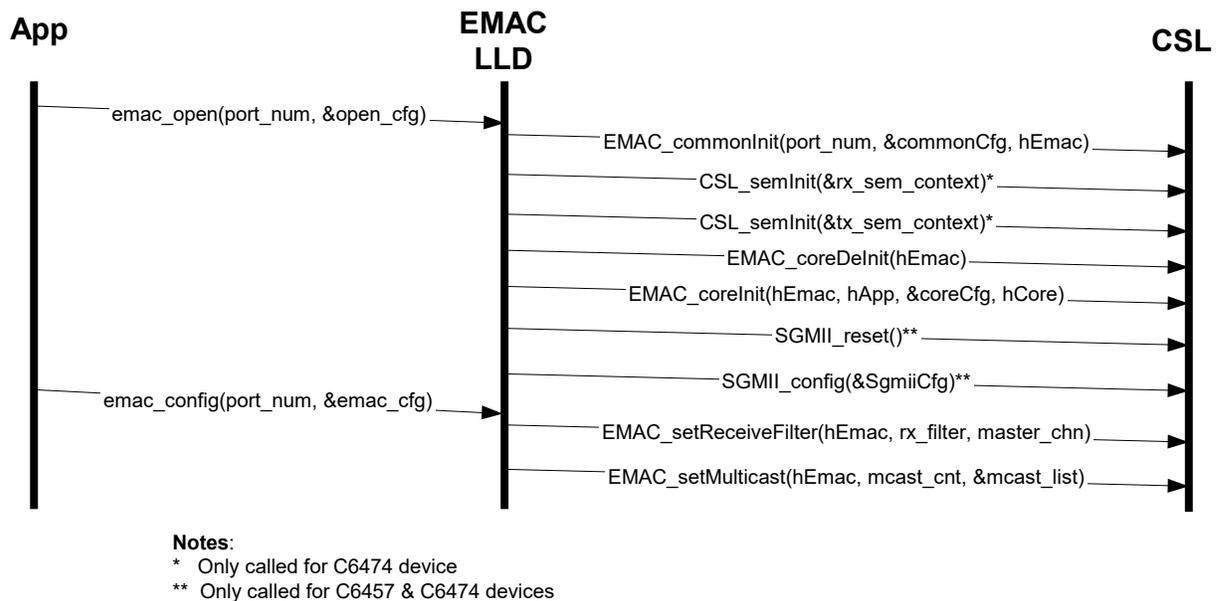

**Figure 2 : EMAC configuration**

Please note that the call flow dedicated above is basic illustration of how `emac_open` is handled internally and may differ from amongst different IP versions of the driver. At the API level from application point of view, it's the same.

Refer to the `EMAC_OPEN_CONFIG_INFO_T` as defined in `emac_drv.h` for details of configuration parameters passed into the driver at the time of `emac_open` API call.

When this API is called, the EMAC driver will first initialize common EMAC configurations (e.g. loopback mode, MDIO enable, PHY address, packet size, etc.) which applies to all the cores, and then initialize the core specific configurations (e.g. channel/MAC address configuration, TX/RX packet descriptor queue size, call back functions, etc.). The driver may

also need to do some device specific configurations (e.g. C6457 & C6474 have a SGMII interface in the EMAC peripheral which need to be configured, and C6474 has a hardware semaphore which also needs to be configured).

The *emac\_config()* API passes the following configuration parameters to the EMAC driver:

- EMAC port number
- EMAC packet receive filter level
- Multicast configurations

NOTE: This API is currently only implemented for v0 version of the driver.

### 7.3.2 Queue Management

The EMAC driver manages one TX packet descriptor queue and one RX packet descriptor queue per each EMAC port, the TX/RX queue size is initialized by the application. The driver pre-allocates the packet buffer for each packet descriptor pushed to the RX queue when an EMAC port is opened. The driver frees both TX/RX queues when an EMAC port is closed.

### 7.3.3 Packet Descriptor

By default, the EMAC driver uses CPPI RAM(8K-byte) for EMAC IP managed Packet Descriptor memory. This internal 8K-byte memory is used to manage the buffer descriptors that are 4-word(16-bytes) deep. The maximum number of descriptors that can be used for managing the packets being transferred is 512. Application shall allocate the packet descriptors for TX, RX and should pass the information to driver using *EMAC\_OPEN\_CONFIG\_INFO\_T* structure during driver open.

### 7.3.4 Packet TX

The application can send a packet by calling *emac\_send()* API, the application needs to allocate an application managed packet descriptor from the application queue, copy the packet data and convert it to the EMAC driver managed packet descriptor format.

The following figure shows the EMAC/CSL API for a packet sent:-


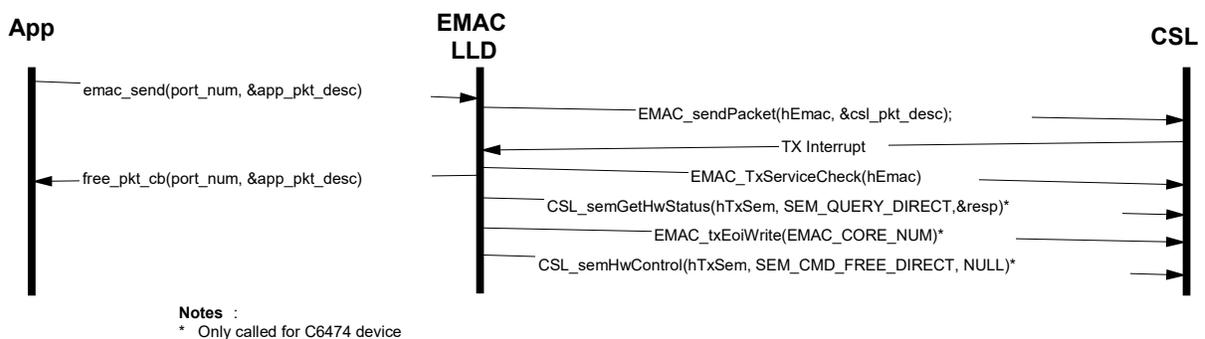


Figure 3 : EMAC TX function

### 7.3.5 Packet RX

When a packet is received, the EMAC driver will convert the packet descriptor received to the application managed packet descriptor format and pass it to the application by calling the `rx_pkt_cb()` callback function.

The following figure shows the EMAC/CSL API for a packet received:-

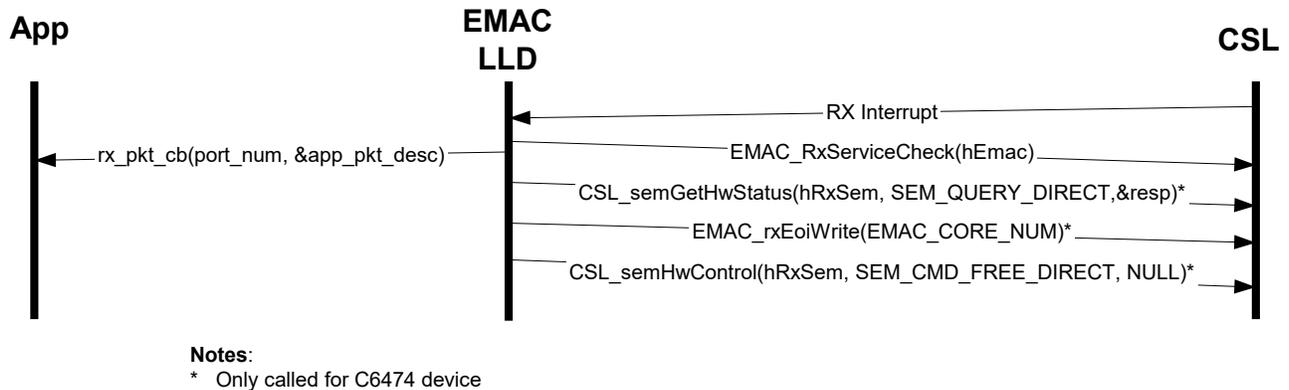

**Figure 4 : EMAC RX function**

### 7.3.6 Single Critical Section

The EMAC driver maintains certain per core specific data structures. These data structures need to be protected from access by multiple users running on the same core. Users are defined as entities in the system which uses the EMAC Driver API's. The critical section defined here should also take into account the context of these users (Thread or Interrupt) and define the critical sections appropriately.

For example: In the EMAC RX interrupt service routine, if RX interrupt is not disabled, a new RX interrupt may pre-empt the existing RX ISR and cause data corruption in CSL CPPI packet descriptors.

The EMAC driver uses the `Emac_osalEnterSingleCoreCriticalSection()` API to enter the single core critical section and `Emac_osalExitSingleCoreCriticalSection` to exit the single core critical section.

### 7.3.7 Multi-core Critical section

The EMAC driver supports multiple cores sharing the same EMAC port. The driver defines the following common data structures that are shared by all the cores:

- `EMAC_Device`                    `emac_comm_dev`
- `EMAC_COMMON_PCB_T`        `emac_comm_pcb`

emac\_comm\_dev contains common EMAC device instance information, it is defined in the EMAC driver, but is managed by the EMAC CSL.


emac\_comm\_pcb contains common port control block information that is managed by the EMAC driver.

The EMAC driver defines a pragma data section “emacComm” for these two data structures, the application needs to put “emacComm” data section in the shared memory (either shared L2 data if available or external memory)

The EMAC driver calls Emac\_osalEnterMultipleCoreCriticalSection() and Emac\_osalExitMultipleCoreCriticalSection() API to enter and exit critical section to access shared resource by multiple cores. The EMAC multicore test application shows an example how to implement semaphore protection for shared resource access among multiple cores. C6472 uses IPC GateMP module to implement a software semaphore, and C6474 uses CSL hardware semaphore.

For shared memory access, the EMAC driver calls Emac\_osalBeginMemAccess() and Emac\_osalEndMemAccess() to protect cache coherence when cache is enabled. The driver always performs an invalidate cache operation before reading data and write back cache operation after writing data. The start address of emac\_comm\_dev and emac\_comm\_pcb need to be set aligned to the cache line size of the device by the application.

The following figure shows an example how the EMAC driver can access the shared resource:-

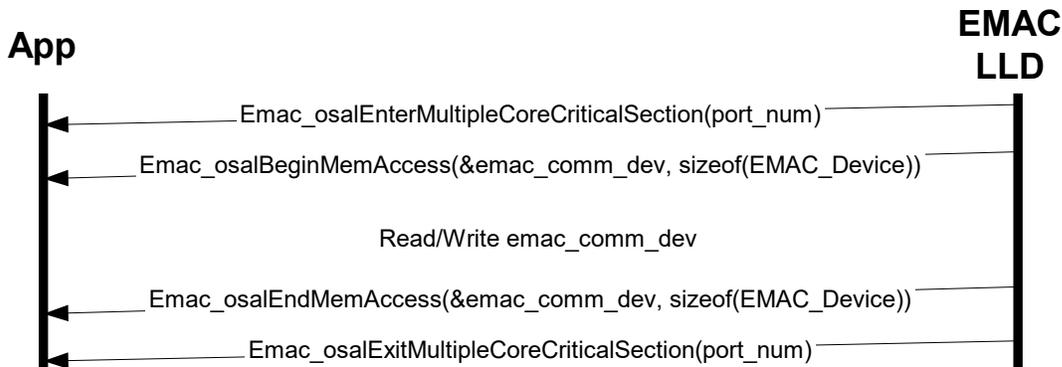

**Figure 5 : EMAC Critical section access**

### 7.3.8 Interrupts

Interrupt configuration is specified in SOC’s init configuration and is provided to the EMAC LLD at time of *emac\_open* API. Interrupt registration is done within the LLD at time of *emac\_open*. Once interrupt is received, application provided callbacks are invoked.

### 7.4 UDMA/NavSS based IP Driver: IP Version 5

IP version 5 supports SOCs based on NavSS/UDMA based DMA interface eg:AM65XX. The LLD provides a common set of APIs to service both CPSW and ICSS-G hardware IP ports. This

is possible due to the NavSS IP which groups together various different hardware IP blocks ( in this case CPSW/ICSS-G) and whose purpose is to support the efficient transfer of data between various software, firmware and hardware entities via the use of channels.

A channel is a DMA instance/resource of which there are the following 2 types:

1. Receive (RX) Channel
  - a. RX Packet Channel: EMAC LLD receives packets from the network via ICSSG/CPSW subsystem
  - b. RX Management Channel: EMAC LLD receives management packets (for example management request responses or TX timestamp or PSI) from ICSSG subsystem.

ICSS Switch supports 4 RX channels distributed as follows:

- Physical port 0 data packets from network
- Management and related responses from firmware to EMAC LLD for Slice 0 (logical ‘half’ of an ICSS)
- Physical Port 1 data packets from network
- Management and related responses from firmware to EMAC LLD for Slice 1

Each RX channel can be “divided” into to N (16) sub channels where each sub-channel can be considered a distinct flow having each having its own free and completion ring pair. This allow for “binning” packets of different types to be delivered to the EMAC LLD. ICSS-G f/w provides a flow id as packet meta data that the DMA uses to determine the ultimate free/completion ring pair to use. Note that when a channel is created using the UDMA driver, a flow is created by “default” and is considered by the driver is the 1st sub-channel or flow. The remaining N-1 flows are sequential.

Default SOC configuration as specified by the `emac_soc.c` file (see sub-subsequent section for overview) provides configuration for the LLD to create 1 RX Packet Channel with 9 sub-channels, a RX Management Response Channel with 3 sub-channels and a second RX Management Response channel with 1 sub-channel per slice.

2. Transmit (TX) Channel: EMAC LLD transmits packets to the network via ICSSG/CPSW subsystem

Default SOC configuration as specified in the `emac_soc.c` file provides configuration for the LLD to create 4 TX channels per physical port (slice). LLD provides the application the option to choose which TX channel to transmit in the packet send function. More details about transmitting packets in subsequent sections below.

Note the highest priority TX channel (i.e., channel 3 for Dual MAC use case, channel 0 for Switch use case) is used to carry management messages to firmware as well.

#### **7.4.1 Memory**


There is no constraint on where Packet Descriptor, packet buffer, and Ring memory resides except that the memory block/region must cache size aligned on cores which are not hardware cache coherent such as the R5F (there may be performance impacts however). Application shall allocate the packet descriptors for TX, RX and Ring memory and should pass the information to LLD using `EMAC_OPEN_CONFIG_INFO_T` structure during driver open. See section 7.4.2.1 for details.

## 7.4.2 EMAC Driver Initialization configuration

The `emac_open()` API is used for driver initialization. Refer to the `EMAC_OPEN_CONFIG_INFO_T` as defined in `emac_drv.h` for details of configuration parameters passed into the driver at the time of `emac_open` API call.

The EMAC driver unit test application provides a sample implementation sequence which initializes and configures the EMAC driver. This implementation is sample only and application developers are recommended to modify it as deemed fit.

The following flow diagram illustrates a sample calling sequence of API calls that can be used as a guideline for application development in addition to what is provided with the EMAC driver unit test application.

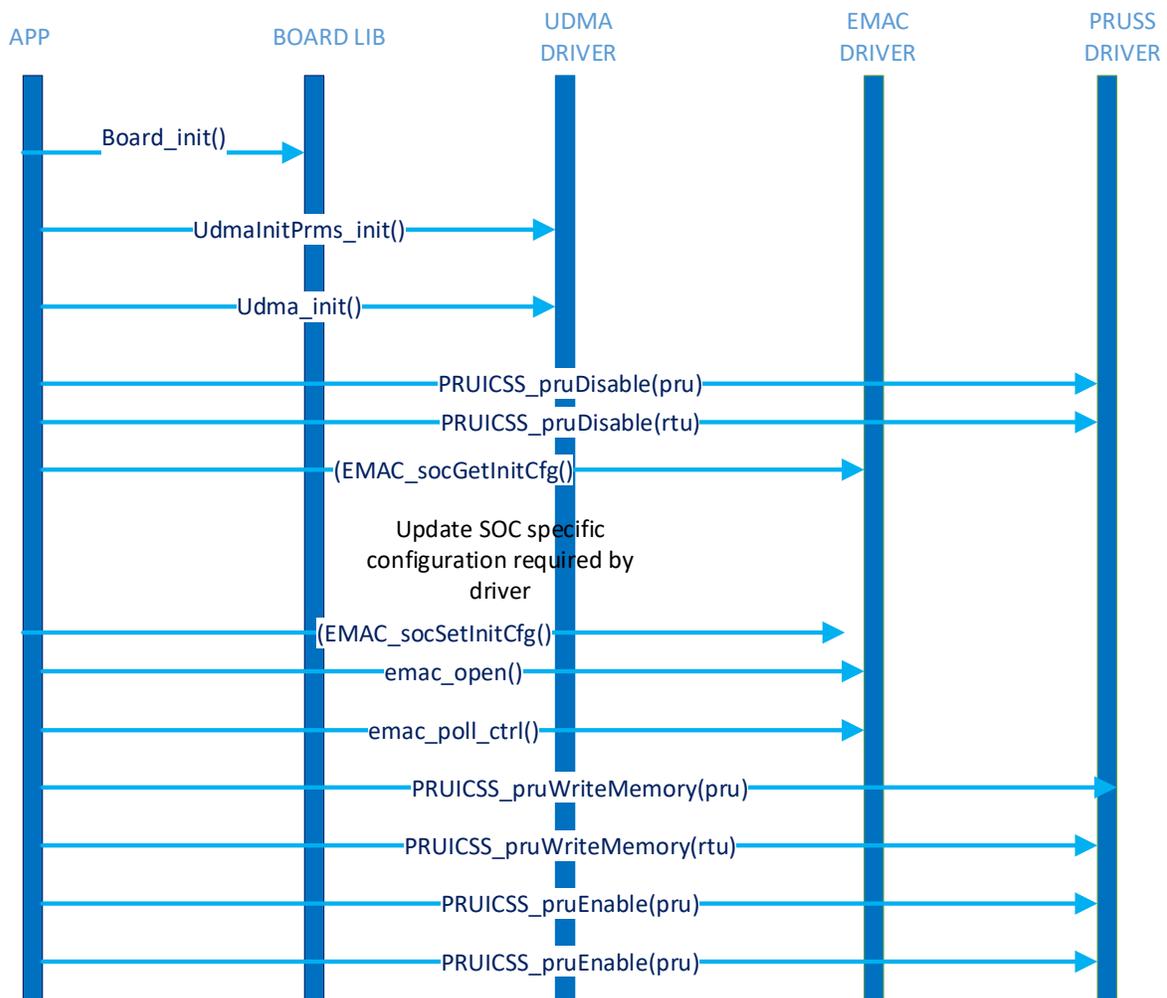

**Figure 6 API Call Flow Sequence**

### 7.4.2.1 EMAC Open Configuration Details.

EMAC\_OPEN\_CONFIG\_INFO\_T is passed into the driver at time of *emac\_open()* and is per port. The following table describe each of the fields of this structure.

Field	Description
master_core_flag	Indicates core as master, used for multiple core use case and legacy SOCs. For Maxwell, only single core use case is currently supported, set this to TRUE.
mdio_flag	Note that this does not apply for Maxwell, always set this to true required to poll for link status
phy_addr	Note that this does not apply for Maxwell, phy address comes for SOC configuration mentioned in below table.
num_of_tx_pkt_desc	Total # of pkt desc initialized for all the TX chans in TX queues/rings
num_of_rx_pkt_desc	Total # of pkt desc initialized for all the RX chans in RX queues/rings
max_pkt_size	Maximum size of the packet in bytes
num_of_chans	Total number of TX/RX channels configured for this core, only applicable for SOC_C6657,for Maxwell, channel configuration comes from SOC configuration mentioned in table below.
p_chan_mac_addr	Note that this does not apply for Maxwell switch use case.  Use EMAC_IOCTL_INTERFACE_MAC_CONFIG
rx_pkt_cb	EMAC RX call back function to receive packets

alloc_pkt_cb	EMAC allocate packet call back function, used to setup RX channels/rings at startup and replenish rx free channel/ring at time of packet receive.
free_pkt_cb	EMAC free packet call back function, used to free packet packet to application during tx completion event, and time of driver close(at close for both rx and tx packets)
rx_mgmt_response_cb	EMAC receive call back function for management response from ICSSG FW
tx_ts_cb	EMAC transmit timestamp response callback function
hwAttrs	Pointer to a driver specific hardware attributes structure, see below table for details
appPrivate	DEPRECATED: Application specific handle, not used by driver
mode_of_operation	DEPRECATED: should always be set to EMAC_MODE_INTERRUPT, to poll the driver for packets, use emac_poll_ctrl API.
udmaHandle	Handle to UDMA driver
drv_trace_cb	EMAC driver trace callback function

#### 7.4.2.1.1 SOC Specific Configuration

At time of *emac\_open*, the driver requires SOC specific configuration. This is passed to the driver via *hwAttrs* field of *EMAC\_OPEN\_CONFIG\_INFO\_T*. Defaults for soc configuration are in *ti/drv/emac/soc/am65xx/emac\_soc.c*. Since the emac drivers supports many SOC types, the *hwAttrs* field is passed in as a *void \** and then internally casted by the driver to that specific SOC hw attributes structure. The *hwAttrs* struct defined for SOC\_AM65XX is *EMAC\_HwAttrs\_V5*

The following is *EMAC\_HwAttrs\_V5* declaration:

```
typedef struct EMAC_HwAttrs_V5_s {
    /*! Per Port configuration */
```

```

EMAC_PER_PORT_CFG portCfg[EMAC_MAX_PORTS];
} EMAC_HwAttrs_V5;

```

This configuration consists of the following fields and is per port.

NOTE that unless stated, those fields should not be modified, fields which can be modified are in bold:

Field	Description
phyAddr	PHY address (board specific)
nTxChans	number of transmit channels
mdioRegsBaseAddr	base address of MDIO sub-system
icssSharedRamBaseAddr	base address of ICSSG shared memory, N/A for CPSW2G
icssgCfgRegBaseAddr	base address of ICSSG configuration registers, N/A for CPSW2G
icssDram0BaseAddr	base address of ICSSG data ram 0 memory, N/A for CPSW2G
txChannel[4] of EMAC_PER_CHANNEL_CFG_TX type	<p>configuration required to setup up to 4 transmit channels which is to be provided by the application. This includes</p> <p><b>chHandle</b> :memory for Udma_ChObj</p> <p><b>freeRingMem</b>: pointer to memory for free UDMA ring, sized to <b>elementCount</b> * size of uint64_t .</p> <p><b>compRingMem</b>: pointer to memory for UDMA completion ring, sized to number of ring entries * size of uint64_t .</p> <p>NOTE: size should be the same as used for free ring mem.</p> <p><b>hPdMem</b>: pointer to memory for packet descriptors that will be pushed to the TX free descriptor software ring maintained by the driver. This needs to be sized by <b>num_of_tx_pkt_desc</b> (field of <i>EMAC_OPEN_CONFIG_INFO_T</i>) * 128.</p> <p><b>eventHandle</b>: placeholder for adding interrupt support at ring level, currently not used.</p>

	<p><b>elementCount:</b> Set to queue depth of the ring/number of ring elements (this can be modified, up to 128)</p> <p>threadId: thread ID to connect cpdma to/from emac psi</p>
<p>rxChannel of type EMAC_PER_CHANNEL_CFG_RX</p>	<p>configuration required to setup upto a receive channel which is to be provided by the application. This includes</p> <p><b>chHandle</b> : pointer to memory for Udma_ChObj</p> <p><b>flowHandle:</b> pointer to memory for Udma_FlowObj to setup additional flows/rings in additional to default flow/ring.</p> <p>nsubChan: number of sub-channels or flows.</p> <p>subChan: sub-channel specific configuration as specified by EMAC_RX_SUBCHAN which has the following fields:</p> <p>nfreeRings: number of free rings associated with sub-channel, for now set to 1 but can be upto4 to support advanced features of flow.</p> <p>Note: EMAC_MAX_FREE_RINGS_PER_SUBCHAN is set to 1.</p> <p><b>freeRingHandle</b>[EMAC_MAX_FREE_RINGS_PER_SUBCHAN]: pointer to memory for free UDMA ring handle</p> <p><b>freeRingMem</b>[EMAC_MAX_FREE_RINGS_PER_SUBCHAN]: pointer to memory for free UDMA ring, sized to <b>elementCount</b> * size of uint64_t .</p> <p><b>compRingHandle:</b> pointer to memory for free UDMA completion handle</p> <p><b>compRingMem:</b> pointer to memory for UDMA completion ring, sized to number of ring entries * size of uint64_t ..</p> <p><b>hPdMem</b>[EMAC_MAX_FREE_RINGS_PER_SUBCHAN]: memory for packet descriptors that will be pushed to the rx free ring. This needs to be sized by <b>num_of_rx_pkt_desc</b> (field of</p>

	<p><i>EMAC_OPEN_CONFIG_INFO_T</i>) * 128.</p> <p><b>eventHandle:</b> placeholder for adding interrupt support at ring level, currently not used.</p> <p><b>elementCountFree</b>[EMAC_MAX_FREE_RINGS_PER_SUBCHAN]: set to queue depth of the rx free ring</p> <p><b>elementCountCompletion:</b> set to queue depth of the rx completion ring</p> <p>threadId: thread ID to connect cpdma to/from emac psi</p>
rxChannelCfgOverPSI	See details above, this channel is used to provide management responses from FW.
rxChannel2CfgOverPSI	See details above, this channel is used to provide transmit timestamp responses from FW.
<i>getFwCfg</i>	Function pointer provided by the application and used by the driver to get firmware specific configuration, required to setup the environment for FW to operate. Must be set to <i>emacGetSwitchFwConfig</i> or switch use case and <i>emacGetDualMacFwConfig</i> for dual mac use case.

### 7.4.2.2 ICSSG Port Queue Configuration

The firmware configuration is directly tied to the ICSSG firmware and must not be modified except for addresses of application provided memory for ICSSG port queues. This memory must be allocated from MSMC SRAM and 128 byte aligned. The size of each port queue per ICSSG instance is 144000 bytes for switch and 100352 bytes for dual mac.

The following sequence is an example illustration of how to accomplish this (NOTE the ports used in this illustration are software logical port 0-4, not EMAC\_SWITCH\_PORT1/EMAC\_SWITCH\_PORT2 and also shown only for ICSSG\_0.

```
/* memory of port queue, from msmc memory, 128 byte aligned */
uint8_t icss_tx_port_queue_icssg0[1][144000] __attribute__((aligned(UDMA_CACHELINE_ALIGNMENT)))
__attribute__((section(".bss:emac_msmc_mem")));
EMAC_FW_APP_CONFIG *pFwAppCfg;
/* Get application part of init config */
emacGetSwitchFwAppInitCfg(port_num, &pFwAppCfg);
/* update the address lo/hi with address of port queue */
pFwAppCfg->txPortQueueLowAddr = 0xFFFFFFFF & ((uint32_t) &icss_tx_port_queue_icssg0[0][0]);
pFwAppCfg->txPortQueueHighAddr = 0;

/* set/store the addresses of the port queue*/
emacSetSwitchFwAppInitCfg(port_num, pFwAppCfg);
```

### 7.4.3 Packet TX

EMAC LLD for AM65XX will support UDMAP operations to transfer data between the host processor and network peripherals. A valid port number and EMAC\_PKT\_DESC\_T are required arguments to the *emac\_send* API.

For DUAL MAC use case, the port number is the physical port used to transmit the packet to the network.

For switch use case, we will use virtual port concept for the port number when calling *emac\_send*. For directed packet to a specific physical port, use [virtual] port EMAC\_SWITCH\_PORT1 to send on physical port 0 of the switch and use [virtual] port EMAC\_SWITCH\_PORT2 to send on physical port 1 of the switch. For un-directed packets use virtual port EMAC\_SWITCH\_PORT. In this case, the driver will take care of transmitting the packet out on the switch port(s).

The transmit submit ring to be used for the transmission should be specified in the PktChannel field of the EMAC\_PKT\_DESC\_T passed in. In other words, the application decides on which of the Transmit Channels(rings) to use. The driver will support configuration of up to 4 TX channels per port (at time of *emac\_open*) each associated with a transmit submit ring/completion ring pair.

The TX port queue (0-7) inside ICSSG that is used to transmit the packet from the ICSSG firmware to the PHY can be specified in the *TxPktTc* field of the EMAC\_PKT\_DESC\_T passed

in in the *emac\_send* API call. In other words, the application can select which TX port queue to use.

*Future Development: The application can set the TxPktTc field to 0xFF and in this case, the firmware will determine which port queue to use based on the priority REGEN(remap) and PORT PRIORITY mapping that is configured for the host port.*

The following sequence occurs during *emac\_send* API call:

1. LLD/driver maintains hardware TX descriptor free linked list (in software) setup at time of *emac\_open*
2. At time of *emac\_send* API call, LLD will pop a free TX descriptor from free linked list and populate free TX descriptor with packet length, pointer to packet buffer and any META data that is passed in the application descriptor. This provides ZERO copy transfer of data. ZERO copy is achieved by transferring ownership of the passed in descriptor and linked packet buffer to the LLD which is directly “linked” to the TX descriptor which is queued on the Transmit Submit ring. Note that no “memcpy” is performed by the driver during *emac\_send* API call.
3. LLD will push the TX descriptor using UDMA ring queue API to the specified transmit submit ring associated with the port number passed into the API call.
4. The *emac\_send* will return failure codes to the calling application based on the failure encountered as follows:
  - a. Port is closed : EMAC\_DRV\_RESULT\_SEND\_ERR
  - b. Unable to submit the packet for transmission on the transmit ring due to the ring being full (in this case the buffer ownership is returned to the application): EMAC\_DRV\_RESULT\_ERR\_UDMA\_RING\_ENQUEUE
  - c. No free TX descriptor available: EMAC\_DRV\_RESULT\_ERR\_NO\_FREE\_DESC
  - d. Invalid packet channel specified in EMAC\_PKT\_DESC: EMAC\_DRV\_RESULT\_ERR\_INVALID\_CHANNEL

NOTE: The DMA is used to move the packet from the host owned buffer to ICSSG firmware, which then will copy the packet to the TX port queue. Thus the DMA for TX packets in TX ring is controlled by firmware and firmware will not allow the DMA of the packet if there is no room in TX port queue in ICSS. So packets will remain in the TX ring in this event and firmware will service another TX channel.

#### **7.4.4 TX Software Descriptor Return Queue Processing**

Note that at the time of *emac\_send()*, the software descriptor passed in’s ownership is given to the driver and needs to be returned back to the calling application as specified in the section above. The following mean is provided by the driver to provide the software descriptor back to the calling application.

1. *emac\_poll\_ctrl()* API will directly query the TX completion queue and invoke the TX callback if packet is present in completion queue. *emac\_poll\_ctrl()* call will return to the user after packets in the desired rings are serviced. When

#### 7.4.5 TX Time Stamp

The *emac\_send()* API will allow a packet to be marked as TX timestamp required and will allow the application to provide a piece of opaque data (i.e. timestamp id) that can be used to associate a TX timestamp with the packet when the TX timestamp is delivered later. Application will need to register a callback at time of *emac\_open* which driver will call to provide the timestamp. The following is the prototype of the callback:

```
typedef void EMAC_TX_TS_CALLBACK_FN_T
(
    uint32_t      port_num,
    /**< EMAC port number          */
    uint32_t ts_id,
    /**< timestamp id to correlate TS response with TX request */
    uint64_t ts,
    /**< 64 bit timestamp provided by ICSSG FW          */
    bool isValid;
    /**< flag to indicate if packet was transmitted and timestamp is valid */
);
```

The callback to the application to free the TX descriptor is completely independent of the callback to the application for TX timestamp response. There is no synchronization between when the TX packet descriptor is returned to the application via the packet free callback and when the TX Timestamp response callback is issued.

The application should not re-use a TX packet descriptor which has a pending TX timestamp request until it receives the TX timestamp response even though the TX packet descriptor has been returned to the application via the packet free callback.

.

In order to request the TX timestamp, the application will need to update the following fields of the `EMAC_PKT_DESC_T` when calling the `emac_send` API:

1. Update `Flags` field in `EMAC_PKT_DESC_T` with `EMAC_PKT_FLAG_TX_TS_REQ`
2. Update `ts_id` field in `EMAC_PKT_FLAG_TX_TS_REQ` with 32 bit id which will be returned with timestamp and can be used by application to correlate TX timestamp request with response

In order to retrieve the timestamp, the application will need to use the `emac_poll_ctrl` API as follows:

1. `emac_poll_ctrl(port_num, rxPktRings, rxMgmtRings, txRings)` where `rxMgmtRings` is a bitmap of RX Management rings to poll and needs to have bit 2 set. If timestamp management packet is available, registered TX timestamp callback will be invoked.

#### 7.4.6 Packet RX

The driver supports multiple receive rings per port. In the case of ICSSG Switch, 9 receive rings are supported. Currently, only 8 of the receive rings are used and packets are directed to the rings based on the PCP to port queue mapping as specified by the following IOCTL: `EMAC_IOCTL_PORT_PRIO_MAPPING_CTRL`. For ICSSG Dual MAC, 1 receive ring is currently supported.

When a packet is received, the EMAC driver will convert the packet descriptor received to the application managed packet descriptor format (`EMAC_PKT_DESC_T`) and pass it to the application by calling the `rx_pkt_cb()` callback function. The receive ring the packet arrives on will be updated in the `PktChannel` field of the application managed packet descriptor being returned via the callback.

Registration of `rx_pkt_cb()` is done at time of `emac_open()` API call. For both mode of operation specified below, `rx_pkt_cb()` will get called to provide the packet to the application.

For receive packets, the following 2 modes of operation are supported and can be configured at time of `emac_open()` for specified port (note the default mode is `INTERRUPT`).

1. `EMAC_MODE_INTERRUPT`: `emac_poll_pkt()` API will `PEND` on a `SEMAPHORE` which is posted by RX ISR (ISR registration/`SEMAPHORE` creation done at time of `emac_open`), invoke RX callback and again `PEND` on `SEMAPHORE`. This is a blocking API call and will only return to user application if `PORT` status is closed. Task context is required in `INTERRUPT` mode.
2. `EMAC_MODE_POLL`: `emac_poll_ctrl()` API will directly query the RX completion queue and invoke the RX callback if packet is received. Will return to user application after each `emac_poll_ctrl()` call.

#### 7.4.7 RX Time Stamp

The 64 bit RX timestamp can be extracted from the `psinfo[]` field of the `EMAC_CPPI_DESC_T` hardware descriptor which is dequeued from the UDMA ring. `psinfo[1]` contains the upper 32 bits of timestamp and `psinfo[0]` contains lower 32 bits of timestamp.

The RxTimeStamp field of the EMAC\_PKT\_DESC\_T will be updated with the 64 bit timestamp from the hardware descriptor and provided for each packet received and provided to the calling application via RX callback.

#### 7.4.8 New APIs

API to retrieve ICSS-G hardware statistics (NOTE that some of the hardware stats saturates much faster due to 16-bit counter in ICSS-G hardware):

1. EMAC\_DRV\_ERR\_E *emac\_get\_statistics\_icssg*(uint32\_t port\_num, EMAC\_STATISTICS\_ICSS-G\_T \*p\_stats, bool clear)

API to poll receive packet rings, receive management response rings and tx completion rings. Note that a task context is required to make this call and this function does not return until all of the rings per the configured bitmaps have been examined.

2. EMAC\_DRV\_ERR\_E *emac\_poll\_ctrl*(uint32\_t port\_num, uint32\_t rxPktRings, uint32\_t rxMgmtRings, uint32\_t txRings)

rxPktRings is a bitmap of which packet completion rings to poll. Please refer to EMAC\_POLL\_RX\_PKT\_RINGS enum for configuration values. To poll multiple rings, these enum values can be “orred” together. First ring (EMAC\_POLL\_RX\_PKT\_RING1) is not used by firmware, The assignment of packets to rings EMAC\_POLL\_RX\_PKT\_RING2 - EMAC\_POLL\_RX\_PKT\_RING9 is based on EMAC\_IOCTL\_PORT\_PRIO\_MAPPING\_CTRL configuration.

rxgmtRings is a bitmap of which management rings to poll. Please refer to EMAC\_POLL\_RX\_MGMT\_RINGS enum for configuration values. To poll multiple rings, these enum values can be “orred” together. First ring (EMAC\_POLL\_RX\_MGMT\_RING1) is not used by firmware, to receive mgmt response from FW, use EMAC\_POLL\_RX\_MGMT\_RING2 and to receive transmit timestamp response from FW, use EMAC\_POLL\_RX\_MGMT\_RING3.

txRings is a bitmap of which packet transmit completion rings to poll. Please refer to EMAC\_POLL\_TX\_COMPL\_RINGS enum for configuration values. To poll multiple rings, these enum values can be “orred” together.

EMAC\_POLL\_TX\_COMPLETION\_RING1 is the lowest priority TX channel and EMAC\_POLL\_TX\_COMPLETION\_RING4 is the highest priority TX channel for DUAL MAC use case.

EMAC\_POLL\_TX\_COMPLETION\_RING1 is the highest priority TX channel and EMAC\_POLL\_TX\_COMPLETION\_RING4 is the lowest priority TX channel for SWITCH use case.

API for issuing IOCTL commands for ICSSG ports

3. `EMAC_DRV_ERR_E` `emac_ioctl(uint32_t port_num, EMAC_IOCTL_CMD emacIoctlCmd, EMAC_IOCTL_PARAMS *emacIoctlParams)`

Callback API for receiving IOCTL command response from FW

4. `EMAC_RX_MGMT_CALLBACK_FN_T`

```
typedef void EMAC_RX_MGMT_CALLBACK_FN_T  
(  
    uint32_t port_num,  
    /**< EMAC port number */  
    EMAC_IOCTL_CMD_RESP_T* pCmdResp  
    /**< Pointer to the IOCTL command response */  
);
```

Application will need to register this callback function with driver at time of `emac_open()` by populating `rx_mgmt_response_cb` of `EMAC_OPEN_CONFIG_INFO_T`. The

## 7.4.9 IOCTL API Details

IOCTL can be classified into the following 2 types:


1. Application invokes IOCTL which results in driver issuing MMR update, non-blocking where IOCTL is synchronous in nature and executes immediately with return code status.
2. Application invokes an IOCTL which results in driver issuing management (MGMT) message over PSIL interface to firmware (FW) over TX channel, this does not complete until MGMT response is returned to calling application via RX management channel. This is an asynchronous call. As part of the IOCTL, a sequence number is used for each IOCTL which is returned to the calling application to correlate an IOCTL request with a response. NOTE: At any given time, only 1 IOCTL request can be outstanding. If 1 IOCTL request is in progress and application issues a 2<sup>nd</sup> one, it will get rejected with error code EMAC\_DRV\_RESULT\_IOCTL\_ERR. If the driver is able to issue the IOCTL request to the FW, it will return EMAC\_DRV\_RESULT\_IOCTL\_IN\_PROGRESS.

The result of the IOCTL call is made available to the calling application with EMAC\_RX\_MGMT\_CALLBACK\_FN\_T. This is a callback function the application is required to register with the driver at time of *emac\_open()*. Refer to the *status* field of EMAC\_IOCTL\_CMD\_RESP\_T

```
typedef void EMAC_RX_MGMT_CALLBACK_FN_T
(
    uint32_t      port_num,
    /**< EMAC port number                */
    EMAC_IOCTL_CMD_RESP_T* pCmdResp
    /**< Pointer to the IOCTL command reponse */
);
```

NOTE: IOCTL tables below will indicate IOCTL type to be either synchronous or asynchronous, also provide details of the *status* field of EMAC\_IOCTL\_CMD\_RESP\_T.

Refer to the following ladder diagram for details of asynchronous IOCTL call flow.

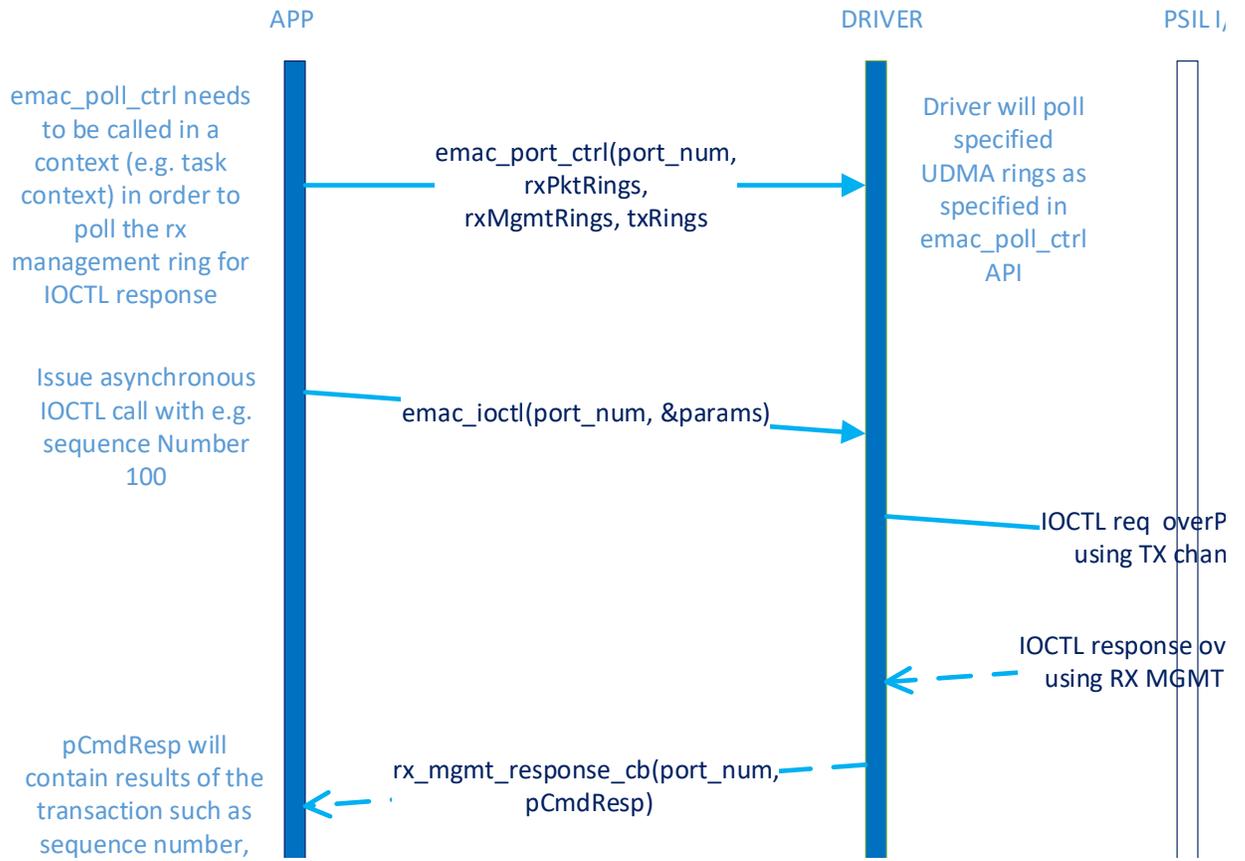

**Figure 7 Asynchronous IOCTL Call Flow**

The tables below provide a list of IOCTLs currently supported for switch and dual mac use case.

### 7.4.9.1 Switch Use Case

The following virtual ports should be used when making IOCTL calls as indicated in the table below:

#define EMAC_SWITCH_PORT0 ((uint32_t)9U)	➔ Host Port
#define EMAC_SWITCH_PORT1 ((uint32_t)10U)	➔ ETH0/SW0 configuration
#define EMAC_SWITCH_PORT2 ((uint32_t)11U)	➔ ETH1/SW1 configuration
#define EMAC_SWITCH_PORT ((uint32_t)12U)	➔ Switch centric configuration

IOCTL Command/Sub Command	Description	IOCTL Parameters	RETURN TYPE
<p>EMAC_IOCTL_FDB_ENTRY_CTRL/ EMAC_IOCTL_FDB_ENTRY_ADD</p> <p>Type: asynchronous IOCTL MGMT message over PSI to FW, MGMT response over PSI from FW via RX MGMT channel.</p> <p>NOTE: To program FDB entry as a special management multicast frame set the block and secure bits in FID_C2. The touched bit in FID_C2 must not be set. This bit is used by PRU internally. The valid bit in FID_C2 must always be set.</p> <p>Please refer FID_C2 Bitfield in AM654x_PROFINET_Switch_Non_Real_time_Interface_Design pdf.</p> <p>fdbEntry field (also the FID_C2) is now an array of 2 and it's possible to assign two values to the two physical ports. Index 0 is for EMAC_SWITCH_PORT1 and Index 1 is for EMAC_SWITCH_PORT2.</p>	<p>Add forward data base entry to internal ICSSG memory.</p>	<p><b>PORT_NUM:</b> EMAC_SWITCH_PORT</p> <p><b>EMAC_IOCTL_FDB_ENTRY:</b> uint8_t mac[6]</p> <p>int16_t vlanId vlanId Range: 0 to 4095</p> <p>uint8_t fdbEntry[2]</p>	<p>EMAC_DRV_RESULT_IOCTL_IN_PROGRESS on success</p> <p>EMAC_DRV_RESULT_IOCTL_ERR_INVALID_VLAN_ID on vlanId out of range.</p> <p>EMAC_DRV_RESULT_IOCTL_ERR_SEND_MGMT_MSG if unable to send MGMT message over PSI as a result of UDMA ring enqueue failure or free TX descriptor not available</p> <p>Status field values returned via EMAC_RX_MGMT_CALLBACK_FN_T:</p> <p>0x1: returned on success. 0x3: returned if an ageable FDB entry is removed in order to ADD the new entry. Aged out entry will be returned to the in the 1<sup>st</sup> 2 bytes of the respParams field of the EMAC_IOCTL_CMD_RESPONSE. 0x10: returned on error (no free entry available)</p>
<p>EMAC_IOCTL_FDB_ENTRY_CTRL/ EMAC_IOCTL_FDB_ENTRY_DEL</p> <p>Type: asynchronous IOCTL MGMT message over PSI to FW, MGMT response over PSI from FW via RX MGMT channel</p>	<p>Delete forward data base entry from internal ICSSG memory</p>	<p><b>PORT_NUM:</b> EMAC_SWITCH_PORT</p> <p><b>EMAC_IOCTL_FDB_ENTRY:</b> uint8_t mac[6]</p> <p>int16_t vlanId vlanId Range: 0 to 4095</p>	<p>EMAC_DRV_RESULT_IOCTL_IN_PROGRESS on success</p> <p>EMAC_DRV_RESULT_IOCTL_ERR_INVALID_VLAN_ID on vlanId out of range.</p> <p>EMAC_DRV_RESULT_IOCTL_ERR_SEND_MGMT_MSG if unable to send MGMT msg</p>

		uint8_t fdbEntry  Note: No need to populate fdb_entry field	over PSI as a result of UDMA ring enqueue failure or TX descriptor not available.  Status field values returned via EMAC_RX_MGMT_CALLB_ACK_FN_T : 0x1: returned on success. 0x10: returned on error (entry to delete not found)
EMAC_IOCTL_FDB_ENTRY_CTRL/ EMAC_IOCTL_FDB_ENTRY_DELETE_ALL or EMAC_IOCTL_FDB_ENTRY_AGEABLE  Type: asynchronous IOCTL MGMT message over PSI to FW, MGMT response over PSI from FW via RX MGMT channel.  <b>For future deliverable, subject to change.</b>	Delete all forward data base entries from internal ICSSG memory	<b>PORT_NUM:</b> EMAC_SWITCH_PORT	EMAC_DRV_RESULT_IOCTL_IN_PROGRESS on success  EMAC_DRV_RESULT_IOCTL_ERR_SEND_MGMT_MSG if unable to send MGMT msg over PSI as a result of UDMA ring enqueue failure or TX descriptor not available.  Status field values returned via EMAC_RX_MGMT_CALLB_ACK_FN_T : 0x1: returned on success. 0x10: returned on error
EMAC_IOCTL_PORT_STATE_CTRL/ EMAC_IOCTL_PORT_STATE_DISABLE  Type: asynchronous IOCTL MGMT message over PSI to FW, MGMT response over PSI from FW via RX MGMT channel.	Place PORT is disabled state	<b>PORT_NUM:</b> EMAC_SWITCH_PORT1 or EMAC_SWITCH_PORT2	EMAC_DRV_RESULT_IOCTL_IN_PROGRESS on success  EMAC_DRV_RESULT_IOCTL_ERR_SEND_MGMT_MSG if unable to send MGMT msg over PSI as a result of UDMA ring enqueue failure or TX descriptor not available.  Status field values returned via EMAC_RX_MGMT_CALLB_ACK_FN_T : 0x1: returned on success.
EMAC_IOCTL_PORT_STATE_CTRL/ EMAC_IOCTL_PORT_STATE_BLOCKING  Type: asynchronous IOCTL MGMT message over PSI to FW, MGMT response over PSI from FW via RX MGMT channel.	Place PORT is blocking state	<b>PORT_NUM:</b> EMAC_SWITCH_PORT1 or EMAC_SWITCH_PORT2	EMAC_DRV_RESULT_IOCTL_IN_PROGRESS on success  EMAC_DRV_RESULT_IOCTL_ERR_SEND_MGMT_MSG if unable to send MGMT msg over PSI as a result of UDMA ring enqueue failure or TX descriptor not available.  Status field values returned via EMAC_RX_MGMT_CALLB_ACK_FN_T : 0x1: returned on success.
EMAC_IOCTL_PORT_STATE_CTRL/ EMAC_IOCTL_PORT_STATE_FORWARD  Type: asynchronous IOCTL MGMT message over PSI to FW, MGMT response over PSI from FW via RX MGMT channel.	Place PORT is forwarding state	<b>PORT_NUM:</b> EMAC_SWITCH_PORT1 or EMAC_SWITCH_PORT2	EMAC_DRV_RESULT_IOCTL_IN_PROGRESS on success  EMAC_DRV_RESULT_IOCTL_ERR_SEND_MGMT_MSG if unable to send MGMT msg over PSI as a result of UDMA ring enqueue failure or TX

			<p>descriptor not available.</p> <p>Status field values returned via EMAC_RX_MGMT_CALLB_ACK_FN_T : 0x1: returned on success.</p>
<p>EMAC_IOCTL_PORT_STATE_CTRL/ EMAC_IOCTL_PORT_STATE_FORWARD_WO_L EARNING</p> <p>Type: asynchronous IOCTL MGMT message over PSI to FW, MGMT response over PSI from FW via RX MGMT channel.</p>	<p>Place PORT is forwarding state without learning</p>	<p><b>PORT_NUM:</b> EMAC_SWITCH_PORT1 or EMAC_SWITCH_PORT2</p>	<p>EMAC_DRV_RESULT_IOCTL_IN_PROGRESS on success</p> <p>EMAC_DRV_RESULT_IOCTL_ERR_SEND_MGMT_MSG if unable to send MGMT msg over PSI as a result of UDMA ring enqueue failure or TX descriptor not available.</p> <p>Status field values returned via EMAC_RX_MGMT_CALLB_ACK_FN_T : 0x1: returned on success.</p>
<p>EMAC_IOCTL_VLAN_CTRL/ EMAC_IOCTL_VLAN_SET_DEFAULT_TBL</p> <p>Type: synchronous IOCTL MMR update, non-blocking</p>	<p>Update ICSSG shared memory with default vlan fid table entries (4096 entries set to default settings)</p>	<p><b>PORT_NUM:</b> EMAC_SWITCH_PORT</p>	<p>EMAC_DRV_RESULT_OK on success</p>
<p>EMAC_IOCTL_VLAN_CTRL/ EMAC_IOCTL_VLAN_SET_ENTRY</p> <p>Type: synchronous IOCTL MMR update, non-blocking</p>	<p>Set entry in vlan table for specified vlan id value where vlan id is from 0 to 4095).</p>	<p><b>PORT_NUM:</b> EMAC_SWITCH_PORT</p> <p><b>EMAC_IOCTL_VLAN_FID_ENTRY</b> int16_vlanId vlanId Range: 0 to 4095</p> <p><b>EMAC_IOCTL_VLAN_FID_PARAMS</b> vlanFidPrms –used to populate vlan_fid and vlan_info</p>	<p>EMAC_DRV_RESULT_OK on success</p> <p>EMAC_DRV_RESULT_IOCTL_ERR_INVALID_VLAN_ID on failure</p>
<p>EMAC_IOCTL_VLAN_CTRL/ EMAC_IOCTL_VLAN_SET_DEFAULT_VLAN_ID</p> <p>Type: synchronous IOCTL MMR update, non-blocking</p>	<p>Set default VLAN ID and PCP bits for specified switch port.</p>	<p><b>PORT_NUM:</b> EMAC_SWITCH_PORT0 (host port) or EMAC_SWITCH_PORT1 or EMAC_SWITCH_PORT2</p> <p><b>EMAC_IOCTL_VLAN_DEFAULT_ENTRY</b> int16_vlanId vlanId Range: 0 to 4095</p> <p>int8_t_pcp range 0-7</p>	<p>EMAC_DRV_RESULT_OK on success</p> <p>EMAC_DRV_RESULT_IOCTL_ERR_INVALID_VLAN_ID on failure</p>
<p>EMAC_IOCTL_VLAN_CTRL/ EMAC_IOCTL_VLAN_GET_ENTRY</p> <p>Type: synchronous IOCTL MMR update, non-blocking</p>	<p>Get entry in vlan table for specified vlan id value where vlan id is from 0 to 4095).</p>	<p><b>PORT_NUM:</b> EMAC_SWITCH_PORT</p> <p><b>EMAC_IOCTL_VLAN_FID_ENTRY</b> to be populated by the driver.</p>	<p>EMAC_DRV_RESULT_OK on success</p> <p>EMAC_DRV_RESULT_IOCTL_ERR_INVALID_VLAN_ID on failure</p>

<p>EMAC_IOCTL_VLAN_CTRL/ EMAC_IOCTL_VLAN_AWARE_MODE</p> <p>Type: asynchronous IOCTL</p> <p>MMR update and MGMT message over PSI to FW, MGMT response over PSI from FW via RX MGMT channel.</p> <p><b>For future deliverable, subject to change.</b></p>	<p>Enable/disable VLAN aware mode.</p>	<p><b>PORT_NUM:</b> EMAC_SWITCH_PORT, enable(1), disable(0)</p>	<p>EMAC_DRV_RESULT_IOCTL_IN_PROGRESS on success</p> <p>EMAC_DRV_RESULT_IOCTL_ERR on failure</p>
<p>EMAC_IOCTL_PRIO_REGEN_CTRL</p> <p>Type: synchronous IOCTL</p> <p>MMR update, non-blocking</p>	<p>Configure the priority regeneration table for a port including the host port.</p>	<p><b>PORT_NUM:</b> EMAC_SWITCH_PORT1 OR EMAC_SWITCH_PORT2</p> <p><b>EMAC_IOCTL_PRIO_REGEN_MAP:</b> 8-byte priority regen array indexed by PCP value. Index 0 of the array corresponds to PCP 0 so if you want to change PCP 0 to 7 then you would write a value of 7 at index 0</p>	<p>EMAC_DRV_RESULT_OK on success</p>
<p>EMAC_IOCTL_PORT_PRIO_MAPPING_CTRL</p> <p>Type: synchronous IOCTL</p> <p>MMR update, non-blocking</p>	<p>Configure the mapping of PCP to port queue. Also configures the mapping of PCP to CPPI flow/host receive ring.</p>	<p><b>PORT_NUM:</b> EMAC_SWITCH_PORT1 or EMAC_SWITCH_PORT2</p> <p><b>EMAC_IOCTL_PORT_PRIO_MAP:</b> 8-byte port priority to port queue mapping indexed by PCP value. Also the 8-byte priority to CPPI flow/receive ring.</p> <p>One-to-one mapping from PCP to output Queue is managed using FT3[0:7] and Classifier[0:7] MMRs.</p>	<p>EMAC_DRV_RESULT_OK on success</p>
<p>EMAC_IOCTL_ACCEPTABLE_FRAME_CHECK_CTRL/EMAC_IOCTL_ACCEPTABLE_FRAME_CHECK_ONLY_VLAN_TAGGED</p> <p>Type: asynchronous IOCTL</p> <p>MGMT message over PSI to FW, MGMT response over PSI from FW via RX MGMT channel.</p>	<p>Admit only VLAN-tagged frames</p>	<p><b>PORT_NUM:</b> EMAC_SWITCH_PORT1 or EMAC_SWITCH_PORT2</p>	<p>EMAC_DRV_RESULT_IOCTL_IN_PROGRESS on success</p> <p>EMAC_DRV_RESULT_IOCTL_ERR_SEND_MGMT_MSG if unable to send MGMT msg over PSI as a result of UDMA ring enqueue failure or TX descriptor not available.</p> <p>Status field values returned via EMAC_RX_MGMT_CALLBACK_ACK_FN_T : 0x1: returned on success.</p>
<p>EMAC_IOCTL_ACCEPTABLE_FRAME_CHECK_CTRL/ EMAC_IOCTL_ACCEPTABLE_FRAME_CHECK_ONLY_UN_TAGGED_PRIO_TAGGED</p> <p>Type: asynchronous IOCTL</p> <p>MGMT message over PSI to FW, MGMT response</p>	<p>Admit Only Untagged and Priority-tagged frames</p>	<p><b>PORT_NUM:</b> EMAC_SWITCH_PORT1 or EMAC_SWITCH_PORT2</p>	<p>EMAC_DRV_RESULT_IOCTL_IN_PROGRESS on success</p> <p>EMAC_DRV_RESULT_IOCTL_ERR_SEND_MGMT_MSG if unable to send MGMT msg over PSI as a result of UDMA ring enqueue failure or TX</p>

over PSI from FW via RX MGMT channel.			descriptor not available.  Status field values returned via EMAC_RX_MGMT_CALLB_ACK_FN_T : 0x1: returned on success.
EMAC_IOCTL_ACCEPTABLE_FRAME_CHECK_CTRL/ EMAC_IOCTL_ACCEPTABLE_FRAME_CHECK_ALL_FRAMES  Type: asynchronous IOCTL MGMT message over PSI to FW, MGMT response over PSI from FW via RX MGMT channel	Admit all frames (default setting)	<b>PORT_NUM:</b> EMAC_SWITCH_PORT1 or EMAC_SWITCH_PORT2	EMAC_DRV_RESULT_IOCTL_IN_PROGRESS on success  EMAC_DRV_RESULT_IOCTL_ERR_SEND_MGMT_MSG if unable to send MGMT msg over PSI as a result of UDMA ring enqueue failure or TX descriptor not available.  Status field values returned via EMAC_RX_MGMT_CALLB_ACK_FN_T : 0x1: returned on success.
EMAC_IOCTL_INTERFACE_MAC_CONFIG  Type: synchronous IOCTL MMR update, non-blocking	Interface MAC address configuration in hardware MMR's.	<b>PORT_NUM:</b> EMAC_SWITCH_PORT0 (host port) or EMAC_SWITCH_PORT1 or EMAC_SWITCH_PORT2  <b>EMAC_MAC_ADDR_T:</b> uint8_t addr[EMAC_MAC_ADDR_LENGTH];  where EMAC_MAC_ADDR_LENGTH is 6	EMAC_DRV_RESULT_OK on success  EMAC_DRV_RESULT_INVALID_PORT on failure
EMAC_IOCTL_SAV_CHECK_CTRL  Type: asynchronous IOCTL MGMT message over PSI to firmware, MGMT response over PSI via RX MGMT channel. <b>For future deliverable, subject to change.</b>	Source address violation check enable/disable control.	<b>PORT_NUM:</b> EMAC_SWITCH_PORT1 or EMAC_SWITCH_PORT2 enable(1), disable(0)	EMAC_DRV_RESULT_IOCTL_IN_PROGRESS on success  EMAC_DRV_RESULT_IOCTL_ERR on failure
EMAC_IOCTL_CUT_THROUGH_CTRL Could use a classi to determine if a packet type is eligible for cut-through. Could also be 1 byte in SMEM per port which FW reads to determine if a packet type is eligible for cut-through <b>For future deliverable, subject to change.</b>	TBD	TBD	TBD
EMAC_IOCTL_HOST_TX_RATE_LIMITER_CTRL <b>For future deliverable, subject to change.</b>	TBD	TBD	TBD
EMAC_IOCTL_HOST_RX_RATE_LIMITER_CTRL <b>For future deliverable, subject to change.</b>	TBD	TBD	TBD
EMAC_IOCTL_PKT_TO_FLOW_CLASSI_CTRL <b>For future deliverable, subject to change.</b>	TBD	TBD	TBD
EMAC_IOCTL_UC_FLOODING_CTRL/ EMAC_IOCTL_PORT_UC_FLOODING_ENABLE  Type: asynchronous IOCTL MGMT message over PSI to firmware, MGMT response over PSI via RX MGMT channel.	Enable flooding of unknown unicast packets to host port	<b>PORT_NUM:</b> EMAC_SWITCH_PORT1 or EMAC_SWITCH_PORT2	EMAC_DRV_RESULT_IOCTL_IN_PROGRESS on success  EMAC_DRV_RESULT_IOCTL_ERR_SEND_MGMT_MSG if unable to send MGMT message over PSI as a result of

			UDMA ring enqueue failure or free TX descriptor not available  EMAC_DRV_RESULT_INV ALID_PORT on failure
EMAC_IOCTL_UC_FLOODING_CTRL/ EMAC_IOCTL_PORT_UC_FLOODING_DISABLE  Type: asynchronous IOCTL MGMT message over PSI to firmware, MGMT response over PSI via RX MGMT channel.	Disable flooding of unknown unicast packets to host port	<b>PORT_NUM:</b> EMAC_SWITCH_PORT1 or EMAC_SWITCH_PORT2	EMAC_DRV_RESULT_IOCTL_L_IN_PROGRESS on success  EMAC_DRV_RESULT_IOCTL_L_ERR_SEND_MGMT_MSG if unable to send MGMT message over PSI as a result of UDMA ring enqueue failure or free TX descriptor not available  EMAC_DRV_RESULT_INV ALID_PORT on failure
EMAC_IOCTL_FRAME_PREEMPTION_CTRL/ EMAC_IOCTL_PREEMPT_TX_ENABLE  Type: asynchronous IOCTL MGMT message over PSI to firmware, MGMT response over PSI via RX MGMT channel.	Enable pre-emption on TX	<b>PORT_NUM:</b> EMAC_SWITCH_PORT1 or EMAC_SWITCH_PORT2	EMAC_DRV_RESULT_IOCTL_L_IN_PROGRESS on success  EMAC_DRV_RESULT_IOCTL_L_ERR_SEND_MGMT_MSG if unable to send MGMT message over PSI as a result of UDMA ring enqueue failure or free TX descriptor not available  EMAC_DRV_RESULT_INV ALID_PORT on failure
EMAC_IOCTL_FRAME_PREEMPTION_CTRL/ EMAC_IOCTL_PREEMPT_TX_DISABLE  Type: asynchronous IOCTL MGMT message over PSI to firmware, MGMT response over PSI via RX MGMT channel.	Disable pre-emption on TX	<b>PORT_NUM:</b> EMAC_SWITCH_PORT1 or EMAC_SWITCH_PORT2	EMAC_DRV_RESULT_IOCTL_L_IN_PROGRESS on success  EMAC_DRV_RESULT_IOCTL_L_ERR_SEND_MGMT_MSG if unable to send MGMT message over PSI as a result of UDMA ring enqueue failure or free TX descriptor not available  EMAC_DRV_RESULT_INV ALID_PORT on failure
EMAC_IOCTL_FRAME_PREEMPTION_CTRL/ EMAC_IOCTL_PREEMPT_GET_TX_ENABLE_STATUS  Type: synchronous IOCTL, non-blocking	Get status of pre-emption on TX	<b>PORT_NUM:</b> EMAC_SWITCH_PORT1 or EMAC_SWITCH_PORT2  <b>EMAC_IOCTL_PREEMPTION_ENTRY:</b> <b>premt_tx_enabled_status</b> field will be populated by the driver as follows : 1 if active, 0 if not active	EMAC_DRV_RESULT_OK on success  EMAC_DRV_RESULT_INV ALID_PORT on failure
EMAC_IOCTL_FRAME_PREEMPTION_CTRL/ EMAC_IOCTL_PREEMPT_GET_TX_ACTIVE_STATUS  Type: synchronous IOCTL, non-blocking	Get status of weather pre-emption is active	<b>PORT_NUM:</b> EMAC_SWITCH_PORT1 or EMAC_SWITCH_PORT2	EMAC_DRV_RESULT_OK on success  EMAC_DRV_RESULT_INV

		<b>EMAC_IOCTL_PREEMPTION_ENTRY:</b> <b>premt_tx_active_status</b> field will be populated by the driver as follows : 1 if active, 0 if not active	ALID_PORT on failure
EMAC_IOCTL_FRAME_PREEMPTION_CTRL/ EMAC_IOCTL_PREEMPT_VERIFY_ENABLE  Type: synchronous IOCTL MMR update, non-blocking	Enable verify state machine	<b>PORT_NUM:</b> EMAC_SWITCH_PORT1 or EMAC_SWITCH_PORT2	EMAC_DRV_RESULT_OK on success  EMAC_DRV_RESULT_INV ALID_PORT on failure
EMAC_IOCTL_FRAME_PREEMPTION_CTRL/ EMAC_IOCTL_PREEMPT_VERIFY_DISABLE  Type: synchronous IOCTL MMR update, non-blocking	Disable verify state machine	<b>PORT_NUM:</b> EMAC_SWITCH_PORT1 or EMAC_SWITCH_PORT2	EMAC_DRV_RESULT_OK on success  EMAC_DRV_RESULT_INV ALID_PORT on failure
EMAC_IOCTL_FRAME_PREEMPTION_CTRL/ EMAC_IOCTL_PREEMPT_GET_VERIFY_STATE  Type: synchronous IOCTL, non-blocking	Get the verify state machine current state	EMAC_SWITCH_PORT1 or EMAC_SWITCH_PORT2  <b>EMAC_IOCTL_PREEMPTION_ENTRY:</b> <b>preempt_verify_state</b> enum field will be populated by the driver as follows:  STATE_UNKNOWN  STATE_INITIAL  STATE_VERIFYING  STATE_SUCCEEDED  STATE_FAILED  STATE_DISABLED	EMAC_DRV_RESULT_OK on success  EMAC_DRV_RESULT_INV ALID_PORT on failure
EMAC_IOCTL_FRAME_PREEMPTION_CTRL/ EMAC_IOCTL_PREEMPT_GET_MIN_FRAG_SIZE_LOCAL  Type: synchronous IOCTL, non-blocking	Get minimum fragment size supported by firmware	<b>PORT_NUM:</b> EMAC_SWITCH_PORT1 or EMAC_SWITCH_PORT2  <b>EMAC_IOCTL_PREEMPTION_ENTRY:</b> <b>premt_min_fragment_size</b> field will be populated with min fragment size supported	EMAC_DRV_RESULT_OK on success  EMAC_DRV_RESULT_INV ALID_PORT on failure
EMAC_IOCTL_FRAME_PREEMPTION_CTRL/ EMAC_IOCTL_PREEMPT_SET_MIN_FRAG_SIZE_REMOTE  Type: synchronous IOCTL MMR update, non-blocking	Configure the minimum non final fragment size supported by remote link partner in units of 64	<b>PORT_NUM:</b> EMAC_SWITCH_PORT1 or EMAC_SWITCH_PORT2  <b>EMAC_IOCTL_PREEMPTION_ENTRY:</b> <b>premt_min_fragment_size</b> field will be populated with min fragment size supported	EMAC_DRV_RESULT_OK on success  EMAC_DRV_RESULT_INV ALID_PORT on failure

<p>EMAC_IOCTL_CUT_THROUGH_PREEMPT_SELECT</p> <p>Type: synchronous IOCTL MMR update, non-blocking</p>	<p>Configures queues are pre-emptive/express and/or as cut-through/Store&amp;Forward</p>	<p><b>PORT_NUM:</b> EMAC_SWITCH_PORT1 or EMAC_SWITCH_PORT2</p> <p><b>EMAC_IOCTL_PREEMPT_OR_CUT_THROUGH_MAP</b> – The struct takes two arrays as inputs pcpPreemptMap is a byte map for each queue where 1 indicates that the queue is a pre-emptive queue. (This is not operational right now) pcpCutThroughMap is similar but for determining if a queue should be cut-through or not</p>	<p>EMAC_DRV_RESULT_OK on success</p> <p>EMAC_DRV_RESULT_INVALID_PORT on failure</p>
<p>EMAC_IOCTL_SPECIAL_FRAME_PRIO_CONFIG</p> <p>Type: synchronous IOCTL MMR update, non-blocking</p>	<p>Specifies the queue number to be used for special packets</p>	<p><b>PORT_NUM:</b> EMAC_SWITCH_PORT1 or EMAC_SWITCH_PORT2</p> <p><b>EMAC_IOCTL_SPECIAL_FRAME_DEFAULT_PRIO</b> – specifies the queue number to be used for special packets</p>	<p>EMAC_DRV_RESULT_OK on success</p> <p>EMAC_DRV_RESULT_INVALID_PORT on failure</p>

**Table 2 Switch IOCTL Commands**

### 7.4.9.2 DUAL MAC Use Case (Single Instance ICSS FW)

For DUAL MAC use case, use the software port number in the IOCTL call as follows:

- ICSSG0 port 0, use LLD 0
- ICSSG0 port 1, use LLD 1
- ICSSG1 port 0, use LLD 2
- ICSSG1 port 1, use LLD 3
- ICSSG2 port 0, use LLD 4
- ICSSG2 port 1, use LLD 5

IOCTL Command/Sub Command	Description	IOCTL Parameters	RETURN TYPE
<p>EMAC_IOCTL_PROMISCUOUS_MODE_CTRL (MMR update, non-blocking)</p> <p>Type: synchronous IOCTL MMR update, non-blocking</p>	<p>Enable/disable promiscuous mode of operation</p>	<p>Port number enable(1), disable(0)</p>	<p>EMAC_DRV_RESULT_OK on success</p> <p>EMAC_DRV_RESULT_IOCTL_ERR on failure</p>
<p>EMAC_IOCTL_PORT_CTRL/</p>	<p>Place PORT is disabled</p>	<p>port number</p>	<p>EMAC_DRV_RESULT_IOCTL_ERR</p>

EMAC_IOCTL_PORT_STATE_DISABLE <b>For future deliverable, subject to change.</b>	state		L_IN_PROGRESS on success EMAC_DRV_RESULT_IOCTL_ERR on failure
EMAC_IOCTL_PORT_CTRL/ EMAC_IOCTL_PORT_STATE_ENABLE <b>For future deliverable, subject to change.</b>	Re-enable the PORT	port number	EMAC_DRV_RESULT_IOCTL_IN_PROGRESS on success EMAC_DRV_RESULT_IOCTL_ERR on failure
EMAC_IOCTL_HOST_TX_RATE_LIMITER_CTRL <b>For future deliverable, subject to change.</b>	TBD	TBD	TBD
EMAC_IOCTL_HOST_RX_RATE_LIMITER_CTRL <b>For future deliverable, subject to change.</b>	TBD	TBD	TBD
EMAC_IOCTL_PKT_TO_FLOW_CLASSI_CTRL <b>For future deliverable, subject to change.</b>	TBD	TBD	TBD

**Table 3 Single Instance ICSS Dual MAC FW IOCTL Commands**

### 7.4.9.3 DUAL MAC Use Case (Interposer Instance ICSS FW)

Placeholder for future development.

### 7.4.10 Platform Specific functions/configuration

Emac\_soc\_v5.c contains AM65XX SOC specific configuration which includes register address mapping, interrupts, NAVSS/UDMAP receive and transmit UDMA channel configuration. The SOC configuration structure will be defined in emac\_soc\_v5.h.

For details of the UDMA subsystem, please refer to Migrating\_Applications\_from\_EDMA\_to\_UDMA\_using\_TI-RTOS .pdf as listed in the reference section.

### 7.4.11 Interrupts

Interrupt registration for receive packet is done within the LLD at time of *emac\_open* which uses UDMA event registration API. Once interrupt is received, application provided receive packet callback is invoked.

NOTE: Interrupt support is currently available for DUAL MAC use case, support for interrupts at UDMA ring events is required for SWITCH use case and is being tracked by PRSDK-3812.

### 7.4.12 Multi- Core Support

Still an open issue, most likely APIs will be provided to clone driver context (handles) from master core and deliver to secondary cores for use with common APIs to enqueue/dequeue packets. Being tracked by PRSDK-5052 (am65xx: UDMA LLD: How to run instance of LLD on multiple cores, share handles, etc)

### 7.4.13 Interposer Card Support

Interposer card is an Ethernet wiring adapter to let 2 icss-g subsystems (instances 0 and 1) drive 2 Ethernet ports with dual mac or switch firmware. This allows the power of more ICSS cores to be applied to each port and direction (RX/TX).

The interposer card divides RGMII RX and TX pins for 2 ports and routes them to separate icss-g RGMII pins as follows:

Interposer eth0 -> RX => icss\_g instance 0, slice 0 (RX only) => EMAC LLD port 0

interposer eth0 -> TX => icss\_g instance 1, slice1 (TX only) => EMAC LLD port 3

interposer eth1 -> RX => icss\_g instance 1, slice 0 (RX only) => EMAC LLD port 2

interposer eth1 -> TX => icss\_g instance 0, slice 1 (TX only) => EMAC LLD port 1

To support this card with NDK (or 3rd party stacks), EMAC LLD provides two 'virtual' ports: EMAC7 (virtual port 7) and EMAC8 (virtual port 8) to be used in dual-EMAC mode. For switch mode, three virtual ports are used: 9,10,11. Under the hood, the EMAC\_LLD will treat handling of these virtual ports as follows:

### 7.4.13.1 Switch Use Case (Switch F/W for Interposer Card)

The following virtual ports should be used when invoking API calls for switch use case:

1. *emac\_open* and *emac\_close*: Use EMAC\_SWITCH\_PORT (virtual port 12); API will internally open LLD ports 0,1,2 and 3 with reduced configuration.
2. *emac\_poll\_ctrl*:
  - a. To poll ETH0 (1st port of switch), use EMAC\_SWITCH\_PORT1; API will internally poll DMA rings associated with (ICSS-G instance 0), LLD port 0 for RX packets and RX MGMT responses. For TX completion events, LLD will internally poll DMA rings associated with (ICSS-G instance 1), LLD port 2.
  - b. To poll ETH1 (2nd port of switch), use EMAC\_SWITCH\_PORT2; API will internally poll DMA rings associated with (ICSS-G instance 1) LLD port 2 for RX packets and RX MGMT response. For TX completion events, LLD will internally poll DMA rings associated with (ICSS-G instance 0), LLD port 0.
  - c. .
3. *emac\_send*:
  - a. to direct packet out of ETH0, use EMAC\_SWITCH\_PORT1; API will internally send directed packet to ICSS instance 1, using DMA resources of LLD port 2.
  - b. to direct packet out of ETH1, use EMAC\_SWITCH\_PORT2; API will internally send directed packet out of ICSS instance 0, using the DMA resources of LLD port 0
  - c. to send un-directed packet, use EMAC\_SWITCH\_PORT; API will clone the packet and send to both instances using DMA resources of LLD ports 0 and 2. Firmware will figure out if packet needs to be physically transmitted out ETH0/ETH1 or both based on a destination mac address lookup into the Forwarding Database.
4. *emac\_ioctl*: Please refer to the IOCTL table for details about which virtual ports to use.
5. *emac\_get\_statistics\_icssg*:
  - a. to query for EH0, use EMAC\_SWITCH\_PORT1, API will internal query for LLD port 2 for RX and LLD port 3 for TX.
  - b. to query for EH1, use EMAC\_SWITCH\_PORT2, API will internal query for LLD port 0 for RX and LLD port 1 for TX.

### 7.4.13.2 Dual MAC Use Case (Interposer Card with Standalone Dual Mac F/W)

Virtual port 7 handling:

1. *emac\_open* and *emac\_close*: internally open (ICSS Instance 0) LLD port 0 and (ICSS instance 1) LLD port 3 with reduced configuration. Since LLD port 0 is for RX handling only, no UDMA TX channels/rings need to be configured at time of *emac\_open*. Similarly for LLD port 3 which is for TX handling only, no UDMA TX channels/rings need to be configured.

2. *emac\_poll\_pkt*: internally poll packets from DMA resources of LLD port 0.
3. *emac\_poll\_ctrl*: internally poll packets from DMA resources of LLD port 0.
4. *emac\_send*: internally send on DMA resources of LLD port 3.
5. *emac\_ioctl*: internally do IOCTL configuration using DMA resources of LLD port 0 as IOCTL is for RX path configuration at this time.
6. *emac\_get\_statistics\_icssg*: internally query for RX statistics from LLD port 0, TX statistics from LLD port 3

Virtual port 8 handling:

1. *emac\_open* and *emac close*: internally open (ICSS Instance 1) LLD port 2 and (ICSS Instance 0) LLD port 1 with reduced configuration. Since LLD port 2 is for RX handling only, no UDMA TX channels/rings need to be configured at time of *emac\_open*. Similarly for LLD port 1 which is for TX handling only, no UDMA TX channels/rings need to be configured at time of *emac\_open*.
2. *emac\_poll\_pkt*: internally poll packets from DMA resources of LLD port 2.
3. *emac\_poll\_ctrl*: internally poll packets from DMA resources of LLD port 2.
4. *emac\_send*: internally send on port 1.
5. *emac\_ioctl*: internally do IOCTL configuration on LLD port 2 as IOCTL is for RX path configuration at this time
6. *emac\_get\_statistics\_icssg*: internally query for RX statistics from LLD port 2, TX statistics from LLD port 1.

## 7.5 EMAC Polling Link Status

The application should poll the EMAC periodically (for example every 100msec) to monitor the PHY link status change via the MDIO peripheral using the API *emac\_poll()*. This should make sure any changes in the link status (link up or down) should be communicated to the other modules using the EMAC LLD. The application can disable the polling for link status in the *emac\_open()* API by disabling the MDIO module. Note that this does not apply for Maxwell and MDIO module is always enabled in order to poll for link status.

### Function Declaration

```
EMAC_DRV_ERR_E emac_poll(uint32_t port_num, EMAC_LINK_INFO_T* p_info)
```

### Where

```
typedef struct EMAC_LinkInfo_s
```

```
{
    bool          link_status_change;
    /**< True: link status changed, False: link status is not changed    */
    EMAC_LINK_STATUS_T link_status;
    /**< PHY link status, only valid when link_status_change is TRUE    */

```


```
} EMAC_LinkInfo;
```

For Maxwell EMAC driver use case with ICSSG Switch, when *link\_status\_change* is TRUE, the application will need to convey the link status change to the firmware using EMAC\_IOCTL\_PORT\_STATE\_CTRL as follows:

If *link\_status* is zero (link down), issue EMAC\_IOCTL\_PORT\_STATE\_CTRL with sub-command EMAC\_IOCTL\_PORT\_STATE\_DISABLE.

If *link\_status* is non-zero(link is up), issue EMAC\_IOCTL\_PORT\_STATE\_CTRL with sub-command EMAC\_IOCTL\_PORT\_STATE\_FORWARD or EMAC\_PORT\_BLOCK or EMAC\_PORT\_FORWARD\_WO\_LEARNING as appropriate.

An example for using *emac\_poll* function is shown below

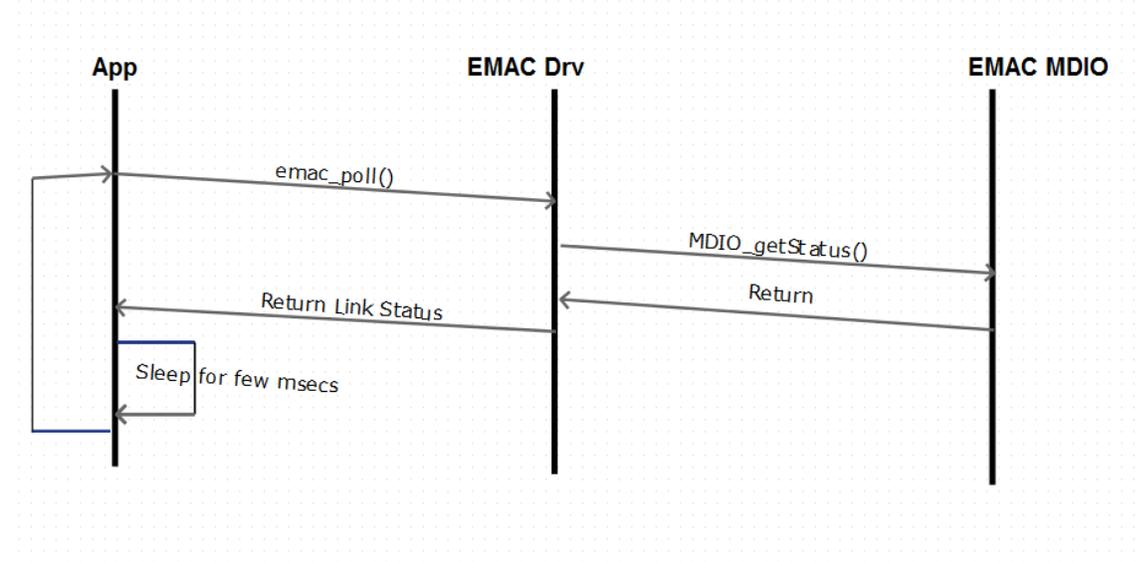

## 7.6 Error Handling

Error handling is done inside all the LLD APIs and returns following error codes as applicable.

Error status	Description
EMAC_DRV_RESULT_OK	Indicates successful API call.
EMAC_DRV_RESULT_GENERAL_ERR	Generic error status code returned or an unspecified error
EMAC_DRV_RESULT_INVALID_PORT	Invalid EMAC port number error returned from EMAC APIs
EMAC_DRV_RESULT_NO_CHAN_AVAIL	Error indicating that there is no channels are available. It is returned form EMAC_init() API
EMAC_DRV_RESULT_NO_MEM_AVAIL	Error indicating that there is no free memory available. Returned from EMAC_init APIs
EMAC_DRV_RESULT_OPEN_PORT_ERR	Error returned from <i>EMAC_open</i> API.

EMAC_DRV_RESULT_CLOSE_PORT_ERR	Error returned from <i>EMAC_close</i> API
EMAC_DRV_RESULT_CONFIG_PORT_ERR	Error returned from <i>EMAC_config</i> API
EMAC_DRV_RESULT_SEND_ERR	Error returned from <i>EMAC_send</i> API
EMAC_DRV_RESULT_POLL_ERR	Error returned from <i>EMAC_poll</i> API to indicate poll link status error
EMAC_DRV_RESULT_GET_STATS_ERR	Error returned from <i>emac_get_statistics</i> and <i>emac_get_statistics_icssg</i> APIs
EMAC_DRV_RESULT_ISR_ERR	Interrupt service error from <i>emac_int_service</i>
EMAC_DRV_RESULT_IOCTL_ERR	IOCTL command error
EMAC_DRV_RESULT_IOCTL_IN_PROGRESS	IOCTL command error, IOCLT command already in progress
EMAC_DRV_RESULT_IOCTL_ERR_IN_PROGRESS	VLAN ID is specified in IOCTL is invalid, out of range, valid rang is 0 to 4095
EMAC_DRV_RESULT_IOCTL_ERR_PORT_CLOSED	IOCTL command error, port is closed
EMAC_DRV_RESULT_IOCTL_ERR_SEND_MGMT_MSG	Error when sending MGMT message over PSI I/F to FW
EMAC_DRV_RESULT_IOCTL_IN_PROGRESS	Successful IOCTL API call and IOCTL command is in progress

## 8 Standards, Conventions and Procedures

### 8.1 Documentation Standards

Doxygen format is used for documentation in source code.

### 8.2 Naming conventions

Processor SDK standard naming conventions are used for file and module naming.

### 8.3 Programming Standards

- C99 standard data types are used in driver implementation.
- MISRA-C coding standards are followed wherever applicable.

### 8.4 Software development tools

- TI's Code Composure Studio for project build setup.
- Make files for source code compilation and Test Applications
- Doxygen for extracting documentation from source code
- Klocworks for static code analysis

## 9 IP Feature List Comparison

This section gives the details of feature comparison of different EMAC HW IPs and software support for those IP features.

NOTE: Table entries below marked with “\*” are supported but currently not tested.

EMAC IP Features		OMAPL137		K2G	
		HW	SW	HW	SW
IP Driver Version		NA	0	NA	1
No. of hardware instance		1	NA	1	NA
Synchronous operations.	10 Mbps	YES	YES	YES	YES *
	100 Mbps	YES	YES	YES	YES *
	1000 Mbps	NO	NA	YES	YES
Standard Media Independent Interface (MII)		YES	YES	YES	YES *
Reduced Media Independent Interface (RMII)		YES	YES	YES	YES
GMII		NO	NA	NO	NA
RGMII		NO	NA	YES	YES
Support quality-of-service (QOS)		2	YES	8	YES *
Ether-Stats and 802.3-Stats statistics gathering.		YES	NA	With RMON Statistic gathering	NA
Transmit CRC generation		YES	NO	YES	NO
Broadcast and Multicast frames selection		YES	YES	YES	YES *
Promiscuous receive mode		YES	YES	YES	YES
Flow control Support		YES	YES	YES	YES
Programmable interrupt logic		YES	NA	YES	NA
CPPI buffer descriptor memory		8k	NA	2k	NA
MDIO module for PHY Management		YES	YES	YES	YES
Wire rate switching (802.1d)		NO	NA	NO	NA

Address Lookup Engine (ALE)	address entries plus VLANs	NO	NA	64	NA
	Wire rate lookup	NO	NA	YES	NO
	Host controlled Time-based aging	NO	NA	YES	NO
	Multiple spanning Tree support	NO	NA	YES	NO
	MAC authentication (802.1x)	NO	NA	YES	NO
	MAC address blocking	NO	NA	YES	NO
	Source port locking	NO	NA	YES	NO
	OUI host accept/deny Feature	NO	NA	YES	NO
VLAN support	NO	NA	YES	NO	

Digital loopback and FIFO loopback modes supported	NO	NA	YES	NO
Emulation Support	NO	NA	YES	TBD
RAM Error Detection and Correction (SECDED)	NO	NA	YES	NO
Programmable transmit Inter-Packet Gap (IPG)	NO	NA	YES	TBD



	Wire rate lookup	YES	NO	YES	NO	YES	NO	YES	NO
	Host controlled Time-based aging	YES	NO	YES	NO	YES	NO	YES	NO
	Multiple spanning Tree support	YES	NO	YES	NO	YES	NO	YES	NO
	MAC authentication (802.1x)	YES	NO	YES	NO	YES	NO	YES	NO
	MAC address blocking	YES	NO	YES	NO	YES	NO	YES	NO
	Source port locking	YES	NO	YES	NO	YES	NO	YES	NO
	OUI host accept/deny	YES	NO	YES	NO	YES	NO	YES	NO
	Feature								
VLAN support		YES	NO	YES	NO	YES	NO	YES	NO
Digital loopback and FIFO loopback modes supported		YES	NO	YES	NO	YES	NO	YES	NO
RAM Error Detection and Correction (SECDDED)		NO	NA	NO	NA	NO	NA	NO	NA
Programmable transmit Inter-Packet Gap (IPG)		YES	NO	YES	NO	YES	NO	YES	NO

## 10 System Design

### 10.1 Design Approach

The EMAC driver provides a well-defined API layer which allows applications to use the EMAC peripheral to control the flow of packet data from the processor to the PHY and the MDIO module to control PHY configuration and status monitoring.

The EMAC driver is designed to meet the following requirements:

- Support multiple EMAC ports (if available on the device) per core (i.e. A53/R5)
- Support multiple channels per core.
- Support multiple cores to use different channels on the same EMAC port.
- The driver is OS independent and exposes all the operating system callouts via the OSAL layer.
- EMAC example test application provides standard configurations and demonstrates measurable benchmarks.

Platform specific functions are mapped to the platform independent APIs using function table which is given below

```
/*! Function to open the specified EMAC port */
EMAC_OpenFxn      openFxn;
/*! Function to config the specified EMAC port for RX filtering, multicast addresses */
EMAC_ConfigFxn    configFxn;
/*! Function to close the specified peripheral */
EMAC_CloseFxn     closeFxn;
/*! Function to send packet to network on specified EMAC port */
EMAC_SendFxn      sendFxn;
/*! Function to poll link status for specified EMAC port*/
EMAC_PollFxn      pollFxn;
/*! Function to get EMAC CPSW port statistics*/
EMAC_GetStatsFxn  getStatsFxn;
/*! Function to poll for receive packets specified EMAC port*/
EMAC_PollPktFxn   pollPktFxn;
/*! Function to get EMAC ICSSG port statistics, IP version 5 only*/
EMAC_GetStatsIcssgFxn  getStatsIcssgFxn;
/*! Function to send IOCTL command for specified port, IP version 5 only*/
EMAC_IoctlFxn     ioctlFxn;
/*! Function to Poll the driver for specified flow/rings, IP version 5 only */
EMAC_PollCtrlFxn  pollCtrl;
```

### 10.2 Dependencies

None

### 10.3 Decomposition of System

The following is an architecture figure which showcases the EMAC driver architecture:-

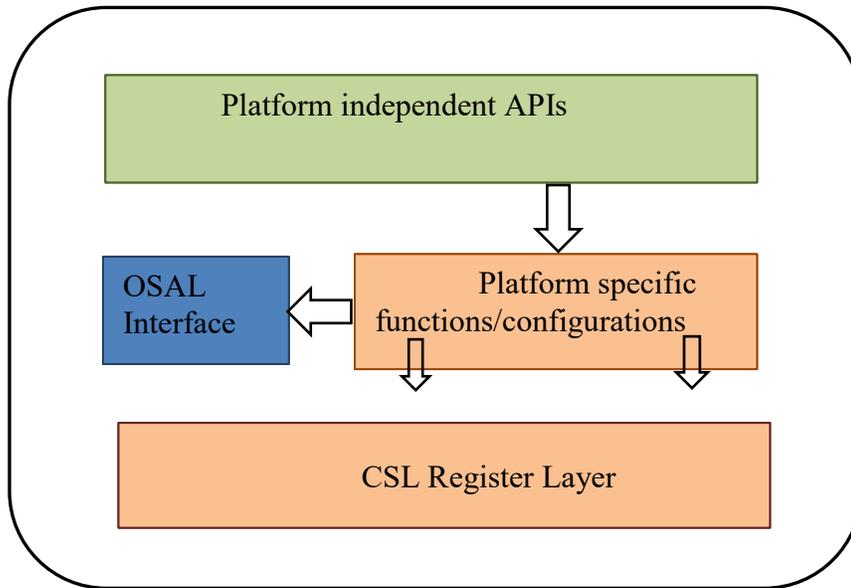


Figure 8 : EMAC LLD Subsystem Block Diagram

The figure illustrates the following key components:-

#### 10.3.1 Platform Independent APIs

EMAC LLD exposes a set of well-defined APIs which are platform independent and common across the platforms. These are the functions which are exposed to application programs.

#### 10.3.2 Platform specific functions/configurations

Platform specific functions implement actual functionality of EMAC LLD for a given platform. These functions can be specific to one or set of platforms. There will be multiple versions of platform specific functions based on the number of platforms supported.

Platform specific configurations will define high-level configurations specific to each platform. This includes register address mapping, interrupts, function table initialization etc. These configurations are included in soc file.

#### 10.3.3 Operating System Abstraction Layer (OSAL)

The EMAC LLD is OS independent and exposes all the operating system callouts via this OSAL layer.

#### **10.3.4 CSL Functional Layer**

The EMAC driver uses the CSL EMAC functional layer to program the device IP by accessing the MMR.

#### **10.3.5 CSL Register Layer**

The register layer is the IP block memory mapped registers which are generated by the IP owner. The EMAC driver does not directly access the MMR registers but uses the EMAC CSL Functional layer for this purpose.

## **11 OMAPL13x Integration**

This section describes the changes required for adding OMAPL13x platform support to EMAC LLD.

v0 version of EMAC LLD supported on C6657 platform will be used as reference for the OMAPL13x integration.

### **11.1 Platform Independent API**

There will be no change to platform independent APIs during OMAPL13x integration.

### **11.2 Platform Specific functions/configuration**

EMAC\_soc.c file will be added which defines platform specific configurations for OMAPL13x.

#### **Gigabit support**

There is gigabit speed support for OMAPL13x platform but existing v0 EMAC driver supports gigabit mode through SGMII. Need to create new version of driver based on v0 for OMAPL13x if we need to avoid SOC specific defines in the driver.

#### **DNUM dependencies**

DNUM register is used in the EMAC LLD to decide the core number. OMAPL13x platform DNUM register returns a value 1 even though there is only one DSP core which is different from other platforms. LLD changes are needed to handle this case.

### **11.3 OSAL**

No changes are expected for EMAC LLD OSAL for integration of OMAPL13x platform.

### **11.4 CSL**

New version of CSL-RL file is added for OMAPL13x platform.

### **11.5 Build Setup**

Update make files to add support for OMAPL13x platform.